



16 Channel Cue Light System

A visual signalling system for theatres that allows silent cues to be given to actors and technicians


- Up to 40 programmable Cue Lights
- Multiple Cue Lights per channel
- 2,000m (6500ft) total cable length
- Uses a single 1 pair cable
- Simultaneous control from two Master Stations




Quick Start Guide

- Using a standard 3 pin XLR **microphone cable** 10, connect one or more Outstations to either XLR connector on the Master Station's rear panel. Both XLRs on the Master can be used at the same time.
- Both **Go and Standby lamps** 3 4 on the Master will light dimmed once the Outstation has performed a lamp test.
- Press a **Standby button** 3 on the Master Station. Standby lamps 3 7 on the Master & Outstation flash.
- Press the Outstation's **Acknowledge button** 9. The **Standby lamps** 3 7 burn steadily. Pressing the Acknowledge button when the Standby lamp is not flashing will light the **Call lamp** 2 on the Master Station.
- Press the **Go button** 4. The **Go lamps** 4 8 light. The Standby lamp goes out if it was on. After 3 seconds the Go lamp flashes. After a total of 15 seconds, the Go lamp turns itself off.
- Trigger cues across multiple channels by the press of a single **Master Group button** 6. Assign channels to **Group A or B** 5.
- When an Outstation is unplugged, the **Fault lamp** 1 flashes. Reset the Fault lamps by pressing both the red and white buttons on the Master Station.


Or you may prefer to watch the "how to" videos at www.LeonAudio.com.au/CueLightVideos

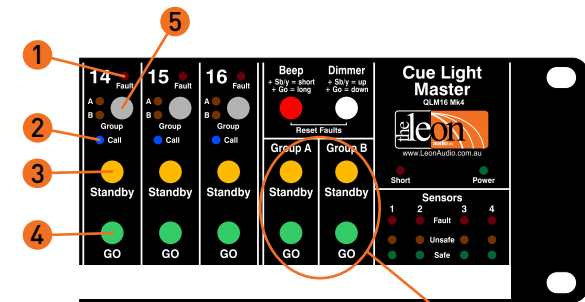

Master Station's front panel

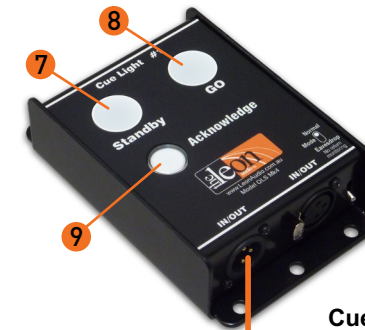

Cue Light Outstation

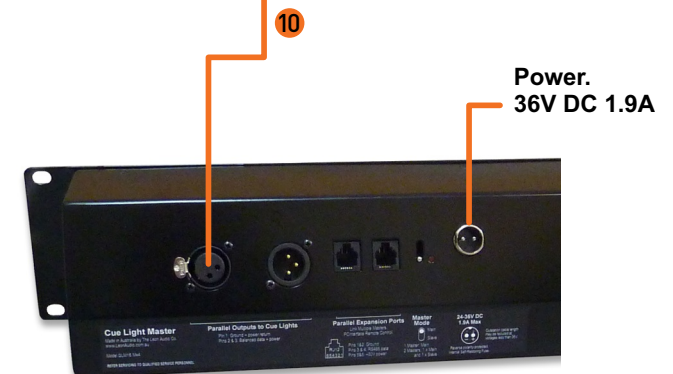

Master Station's rear panel




Index

- 2 Quick start Guide
- 4 The Cue Light Components
- 6 PCinterface QL-PCi Mk4
- 7 Work-Light Outstation QWL-xx Mk4
- 8 16 Channel Master Station. QLM16 Mk4
- 14 Dual Master Stations
- 16 Cue Light Outstation types and configuration
- 17 Cue Light Outstations
 - Standard Outstation. QLS Mk4
 - Standard Outstation with beeper. QLS-B Mk4
 - Small Footprint Cue Light. QLS-SM Mk4
 - Small Footprint with beeper. QLS-SM Mk4
- 21 Multiple Outstations per channel
- 22 Relay Outstation. QLR Mk4
- 25 Sensor Outstation. QTS Mk4
- 28 Work-Light Outstation. QWL-xx Mk4
- 29 Changing an Outstation's channel
- 30 Outstation Cables
- 38 What's the cable limit?
- 39 More than 16 channels
- 40 Linking multiple Master Stations
- 41 Master Station's Configuration Editor
 - 42 Alternate Button Overlays
 - 43 Starting the Configuration Editor
 - 44 Opening & closing files
 - Restoring previously saved files
 - 45 Cue Light Outstation options
 - 48 Master Station options
 - 50 Relay Outstation options
 - 53 Sensor Outstation Options
- 54 Diagnostics
- 55 System design suggestions.
- 56 Why not use bigger buttons?
- 57 Specifications
- 60 Warranty



Cue Light Components

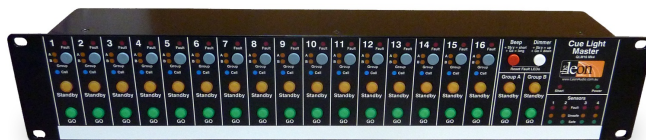

Cue Light Master Station.

Cue Light Master Station QLM16 Mk4

Details on page 8

- 16 channel digital Cue Light Master Station can be used with any number of Cue Light Outstations from 1 to 40.
- Any number of Outstations (up to the maximum of 40) can be connected to any channel.
- Up to 6 Master Stations can be linked for larger systems.
- Dual Masters can be used on the same wiring universe.
- Can be controlled from a PC running show control software.
- 5 types of Outstation including Relay and Sensor versions.
- Each individual channel programmable with up to 17 options.
- Outstations can be wired using daisy chain, star and/or loop wiring topologies on a single circuit using 3 pin XLR microphone cable.
- Total cable length can be greater than 2,000m (6,500 feet).
- Powered from a universal 90/264V 50/60Hz external power supply.



Standard Cue Light Outstation Model QLS Mk4

Cue Light Outstation with Beeper Model QLS-B Mk4

Cue Light Outstation QLS Mk4

Details on page 17

- 20mm Go and Standby LED lamps are bright, wide angle and dimmable.
- Standby lamp programmable to red or yellow on a channel by channel basis.
- Non-standard lamp colours available to special order.
- Backlit Acknowledge button can also signal the Master Station.
- Eavesdrop mode switch enables the use of multiple Outstations per channel.
- 17 programmable options for each individual Outstation.
- 3/8" microphone stand mount and 10mm mounting hole for hook clamp.

Cue Light Outstation with Beeper. QLS-B Mk4

Details on page 17

- As per the Standard Outstation, but with an inbuilt beeper. It can be used as a Standard Outstation (without beeps) as it only beeps when specifically commanded to do so.
- The beeper is triggered by the Beep button on the Master Station and/or programmable **Beep-on-Go** option.

All Outstations are available individually.

Cue Light Components (continued)



Small Footprint Cue Light
Model QLS-SM Mk4

Small Footprint Cue Light with Beeper
Model QLS-SM-B Mk4

Small Footprint Cue Light QLS-SM Mk4

Details on page 17

- Useful where space is limited such as on lectern tops.
- 20mm Go and Standby LED lamps are bright, wide angle and dimmable.
- Standby lamp programmable to red or yellow on a channel by channel basis.
- Backlit Acknowledge button can also signal the Master Station.
- 16 programmable options for each individual Outstation.
- It has no Eavesdrop mode switch.
- Permanently attached 1m Canare cable fitted with a 3 pin male XLR.

Small Footprint Cue Light with Beeper.

Details on page 17

QLS-SM-B Mk4

- As per the Standard Outstation, but with an inbuilt beeper. It can be used as a Standard Outstation (without beeps) as it only beeps when specifically commanded to do so.
- The beeper is triggered by the Beep button on the Master Station and/or programmable **Beep-on-Go** option.



Relay Outstation

Relay Outstation QLR Mk4

Details on page 22

- This Outstation has two relays with changeover contacts which allows for direct control of other circuits such as smoke machines, door bells and stage telephones etc.
- The relays are controlled by the Go and Standby buttons on the Master Station.
- Cue Light/Latching/Momentary operating modes are selectable.
- Connection to the voltage free relay contacts is via Phoenix compatible connectors.
- Eavesdrop mode switch enables the use of multiple Outstations per channel.
- There is provision for an external Acknowledge button.
- 10 programmable options for each individual Outstation.
- It can function as a Standard Outstation although the Go and Standby lamps are only 3mm in diameter.

All Outstations are available individually.

Cue Light Components (continued)



Contact Sensor



RS232/RS485
Computer interface

Contact Sensor QTS Mk4

Details on page 25

- Allows monitoring of remote switch contacts such as used on a theatrical trap door lock.
- Sensor Outstations have a dedicated display on the Master Station.
- Normally open or closed single pole contact required.
- Selectable **End Of Line Resistor** detects opens & shorts in the local switch wiring.
- Three programmable options for each individual Sensor Outstation.

PCinterface QL-PCi Mk4

- Connects between the Master Station and a PC running 3rd party show control software to provide remote control for up to 6 Master Stations via RS232 or RS485.
- Allows control from a touch screen or show control script.
- A separate PDF detailing the **PCinterface QL-PCi Mk4** can be found here www.LeonAudio.com.au/PCinterface.pdf

All Outstations are available individually.



Cue Light Components (continued)



Work-Light

600mW Work-Light QWL-BL Mk4 (Blue LEDs)
Details on page 28 QWL-WH Mk4 (White LEDs)


- Powered by the Cue Light system, it connects just like a standard Cue Light Outstation.
- Reduced Work-Light set-up time.
Battery backing the Master Station provides continuous backstage/understage lighting in case of loss of mains.
- The Work-Light can be turned on/off by a channel on the Master Station or it can be set to be on all the time, saving resources on the Master.
- Independent 10 step dimmer.
- Typically 20+ Work-Lights can be connected to a system.
(Dependent on how many Cue Light Outstations are connected)

Coming Soon

- Ethernet bridge.
- Repeater/Splitter with 3 ports.
2,000m of cable on each port. (6,000m in total)
Master Station and Outstations can connect anywhere on any port.
Supports up to 120 Outstations.



16 Channel Master Station QLM16 Mk4

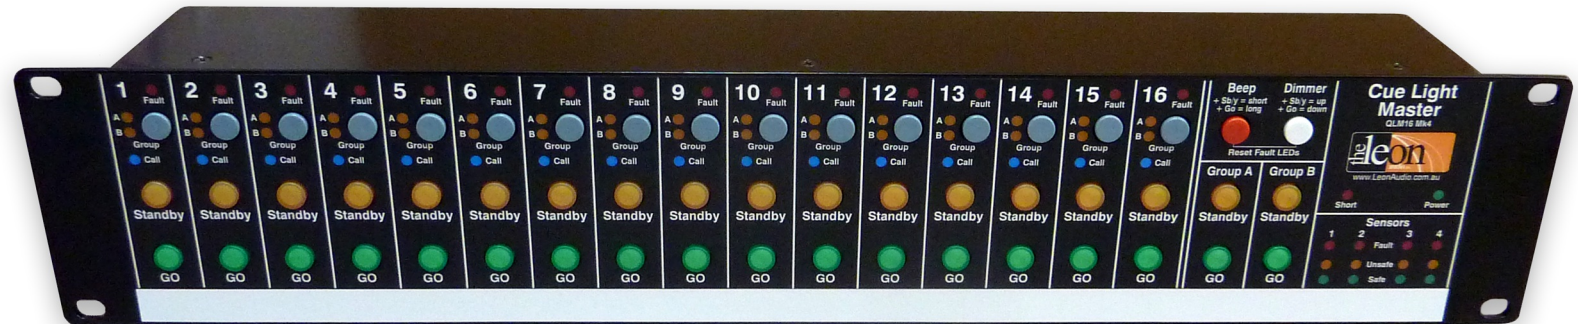

The Cue Light system consists of a Master Station and any number of Cue Light Outstations from 1 to a maximum of 40.

Cue Light Outstations have an **Eavesdrop** mode which allows any number of Outstations to be assigned to the same channel (up to the system's maximum of 40).

The wiring between a Master Station and its Outstations is known as a wiring **universe**. A universe supports a maximum of 16 channels. With multiple Outstations per channel, there may be up to 40 Outstations connected to these 16 channels.

The Master Station can be at connected at any point in the wiring **universe**. This allows the Master Station to be easily moved from any node to any other node on the wiring such as from prompt corner to a production desk in the auditorium during rehearsals.

Two Master Stations can be connected to the same wiring **universe** allowing for dual control of 16 channels.

Up to 6 Master Stations can be linked for larger systems. Each Master Station must have its own wiring universe of 16 channels.

The digitally addressed Cue Light Outstations are connected using a single circuit of 3 pin XLR microphone cables although screened data cable is preferable. CAT5/6 cable may be used. Outstations may be connected using either daisy chain, star and/or loop wiring topologies. The Master Station provides power to all Outstations over this same cable.


Cable faults are reported as soon as they happen as Outstations are in continuous communication with the Master Station.

A **Short** lamp indicates short circuits in the external wiring to the Outstations. External wiring is protected by an electronic current limiter which is backed up by a self resetting fuse.

A white designation strip runs beneath all channels.



16 Channel Master Station (continued)

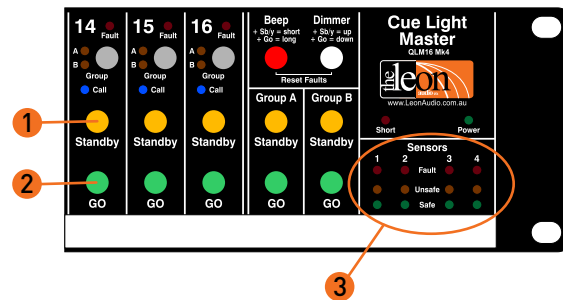

Contact Sensor Outstations

The Contact Sensor Outstation QTS Mk4 allows remote monitoring of voltage free switch contacts such as used on a theatrical trap door's lock.

Sensor units 1-4 have a dedicated display on the Master Station 3

Sensor units 5-16 use channels 5-16 on the Master Station. Other Outstations can not share a channel with a Sensor Outstation.

Eavesdrop Outstations

On any channel, set only one Outstation to **Normal Mode**. This Outstation will send **return monitoring** to the Master Station for driving the **Go and Standby lamps** 1 2

All additional Outstations assigned to that same channel must be set to **Eavesdrop Mode**.

These additional Outstations respond to commands from the Master Station but send no return monitoring. They can however, send **Call** signals. (see the following page)

See the section on **Multiple Outstations per channel** (page 21) for more details on Eavesdrop Mode.


Go and Standby buttons 1 2

The illuminated Go and Standby buttons on the Master Station light dim once an Outstation is connected and has performed a lamp test. These 2 buttons are used to send cues to the Cue Light Outstations.

The illuminated Go and Standby buttons are driven by data returned from the Outstations and light brightly in response to a Go or Standby cue. This is known as **positive monitoring**. It is not just a local indication that a button has been pressed.



16 Channel Master Station (continued)

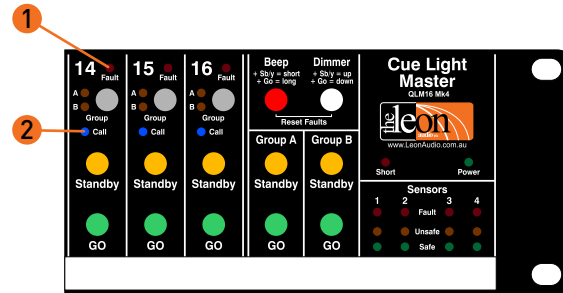

Call lamps 2

Each channel has a blue **Call** lamp which enables an Outstation to signal the Master Station.

An Outstation's Acknowledge button has 2 functions.

- If a Standby cue is waiting to be acknowledged (Standby lamps flashing), pressing the Acknowledge button will cause the Standby lamps to burn steadily.
- Pressing the Acknowledge button at any other time will light the blue Call lamp on the Master Station.

The Call lamps can be disabled as well as set to flash or light steadily on a channel by channel basis. These changes are made via the Master Station's **Configuration Editor**. (see page 41)

While Outstations set to **Eavesdrop Mode** do not send return monitoring to the Master, they do send **Call** signals.

Fault lamps 1

A red Fault lamp at the top of each channel indicates when an Outstation is not communicating with the Master Station. This could be due to an unplugged Outstation or a cable fault.


The Fault lamp has 3 states. On, Off and Flashing.

- The Fault lamp is off when a channel is unused (no Outstation connected). Go and Standby buttons will also be off. The Fault lamp is also off when an Outstation is connected but in this case the Go and Standby buttons will light dimmed.
- The Fault lamp is lit steadily if a channel has an Outstation connected in **Eavesdrop Mode** but no Outstation in **Normal Mode**. The **Eavesdrop Mode** Outstation will still respond to Go and Standby cues but the Go and Standby buttons on the Master Station will not light as there is no return monitoring from Outstations in **Eavesdrop Mode**.
- The Fault lamp flashes when all Outstations on that channel are unplugged.

Flashing Fault lamps can be reset by pressing both the white and red buttons on the Master Station. The Master Station and Outstations are in continuous communication with each other, enabling prompt detection of cable faults or disconnected Outstations.



16 Channel Master Station (continued)

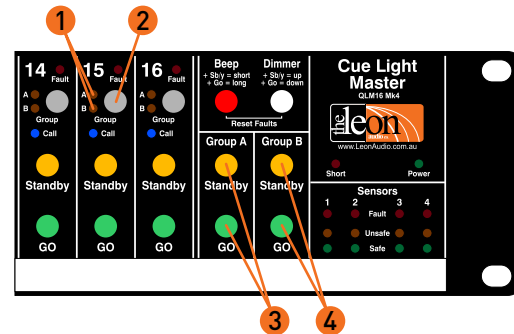


Group buttons

The group feature allows cues across multiple channels to be triggered by the press of a single button. Any channel can be assigned to one of two Group Master buttons **Group A** 3 and **Group B** 4

The group assignment for each channel is controlled by the grey **Group button** 2 and two associated amber lamps 1. Pressing a grey Group button cycles through four possible group assignments: A, B, A+B and none. Pressing either of the Group Master Go or Standby buttons is exactly the same as pressing the corresponding Go or Standby button on any channel that has been assigned to that Group Master.

The channel's Go and Standby buttons still remain fully operational independent of any group assignment. The status of each channel's Group assignment is saved in EEPROM memory and is restored when the Master Station is powered up.

To quickly clear Group assignments across multiple channels, press and hold any two grey Group buttons for 0.5 seconds. All channels between (and including) those two grey buttons will have their Group assignments set to off.

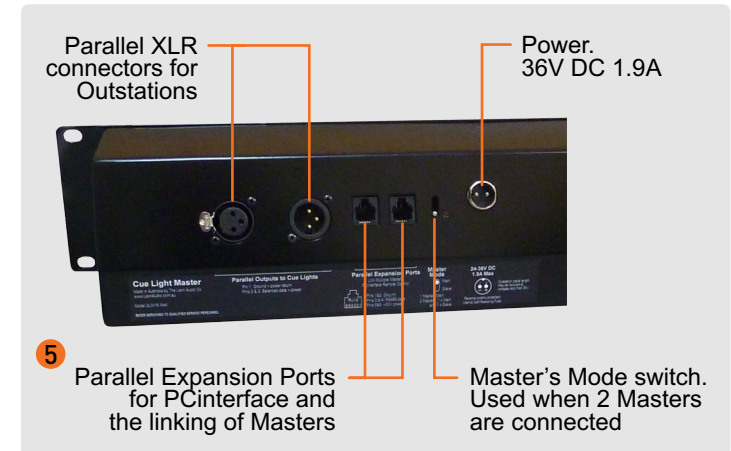

Master Station's rear panel

Linking Multiple Master stations


When multiple Master Stations are used, the 4 **Group Master** buttons 3 4 can be linked across the Masters via **Expansion Ports** 5 on the Masters' rear panels. Up to 6 Master Stations can be linked.

Pressing any of the four Group Master buttons on any linked Master Station, will electronically **press** the corresponding Group Master button on all linked Master Stations. This allows cues across multiple Master Stations to be triggered by the press of a single button.

For more details see **Linking multiple Master Stations** on page 39.



16 Channel Master Station (continued)

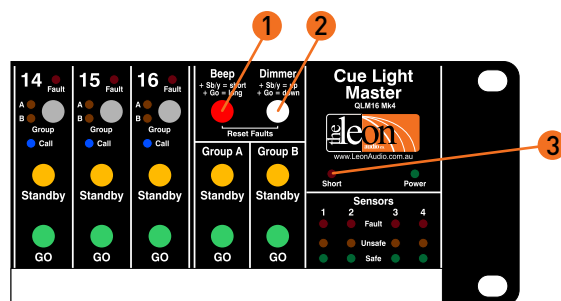

Beep button 1

The red **Beep button** works like a shift key in conjunction with a channel's Go and Standby buttons.

The Beep function requires the Beeper Outstation (Model QLS-B or QLS-SM-B).

The QLS-B Outstation functions just like a standard outstation when the Master's beep button isn't pressed.

The beeper can be triggered to emit either a very short beep (which sounds like a click), or beep for as long as the button is pressed, up to a maximum of one second.

Beep button + Standby button = very short beep.
Beep button + Go button = long beep.

The beep is accompanied by flashing of the Standby lamp on the triggered Outstation(s). The Beep button can also be used in conjunction with the Group Master buttons.

The beep function can be disabled on a channel by channel basis via the Master's **Configuration Editor**. (see page 41)

The Beep command is ignored by Outstations not fitted with a beeper.

Short lamp 3

The Short lamp indicates short circuits on the external XLR wiring. Fault current is electronically limited to approximately 1.6 amps.

If the short is maintained for more than 400mS, the power supply enters a hiccup mode where power to the Outstations is turned off and reapplied once every few seconds until the fault is cleared.

If the short is persistent, the period before reapplying power increases from 2 seconds to 8 seconds.

Dimmer button 2

The Cue Light Outstation lamps can be dimmed in five steps from 100% down to 5%.

Press and hold the white **Dimmer button** on the Master Station. Use the Standby button to increase intensity or the Go button to decrease intensity.

Once 5% or 100% is reached, further presses are ignored. Four presses of the Standby button will set an Outstation to 100% irrespective of its initial setting. The Dimmer button can also be used in conjunction with the Group Master buttons.

The Go and Standby lamps on the selected Outstation flash alternately as the intensity is adjusted.

The intensity can also be adjusted from an Outstation. Press and hold the dimmer button on the Master Station. Pressing the Acknowledge button on an Outstation starts the Go and Standby lamps flashing alternately. Subsequent presses of the Acknowledge button increase the intensity by 1 step. When 100% is reached, it rolls back to 5%. The lamps flash faster when at 100%.


The dimmer settings for each channel are saved in the Master's memory and are restored when the Master Station is powered up.

Tip:

Multiple channels can be dimmed simultaneously by assigning channels to one of the 2 Groups and then using that Group's Master Go and Standby buttons to increase or decrease the dimmer intensity.



16 Channel Master Station (continued)

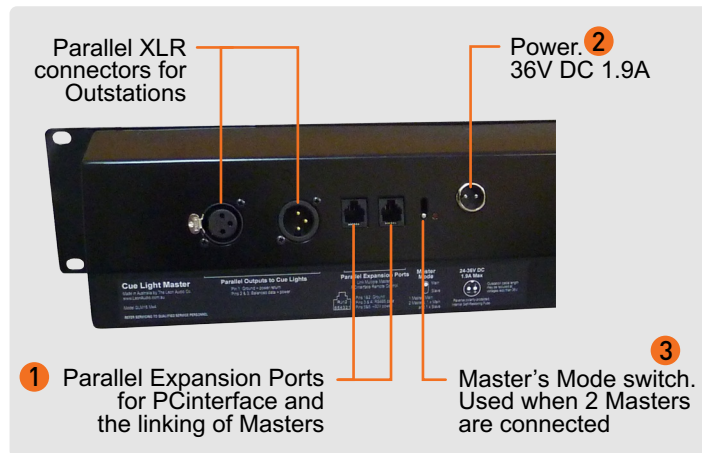

Master Station's rear panel


Expansion Port 1

An **Expansion Port** consisting of two parallel RJ12 connectors allows for linking of multiple Master Stations (see page 11) and also for connection of the PCinterface unit (see page 6).

The cable is of the 6 core flat telephone type. Suitable cables are supplied with the PCinterface and multiple Master Station purchases.

These cables are intended to be short patch leads because they are unshielded and untwisted, however, lengths up to 100m (300 ft) will work.

RJ12 cables with only 4 of the 6 pins wired can also be used. (pins 1 & 6 not wired)

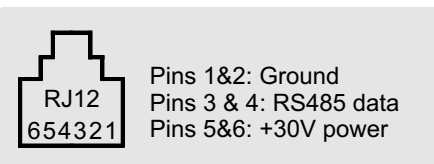

Expansion Port wiring
(looking at the socket on the rear of the Master)

Master Mode Switch 3

When two Master Stations are connected to the same wiring **universe** for dual control of the same 16 channels, set the **Master Mode switch** on one Master Station to **Main** and to **Slave** on the second Master Station.

The configuration settings stored in the Main Master Station will be those used to run the Cue Lights. These configuration settings will also be copied across to the **Slave** Master so that either Master can then run the show.

If only one Master Station is connected, set the mode switch to the **Main** position.

Master Mode



Main: Single or 1st Master
Slave: 2nd Master

Master's Mode switch

Power Connector 2

The Master Station is powered from an external AC adaptor rated at 36V DC and 1.9 amps.

Input to the adaptor is 90 to 264 volts 50/60Hz.

The Master Station provides power to all Outstations via the interconnecting 3 pin XLR cables.

The Master Station can be powered from a supply as low as 24 volts DC although the cable length to the Outstations may need to be reduced as there are less volts available to overcome losses in the interconnecting cables.




16 Channel Master Station (continued)

Quick Start Guide for Dual Master Stations

Two Master Stations can be connected to the same Cue Light wiring *universe* allowing for control of 16 channels from both Master Stations at the same time.

Typical applications include using a second Master Station when a stage manager's sight lines are blocked and also at the production desk in the auditorium during rehearsals.

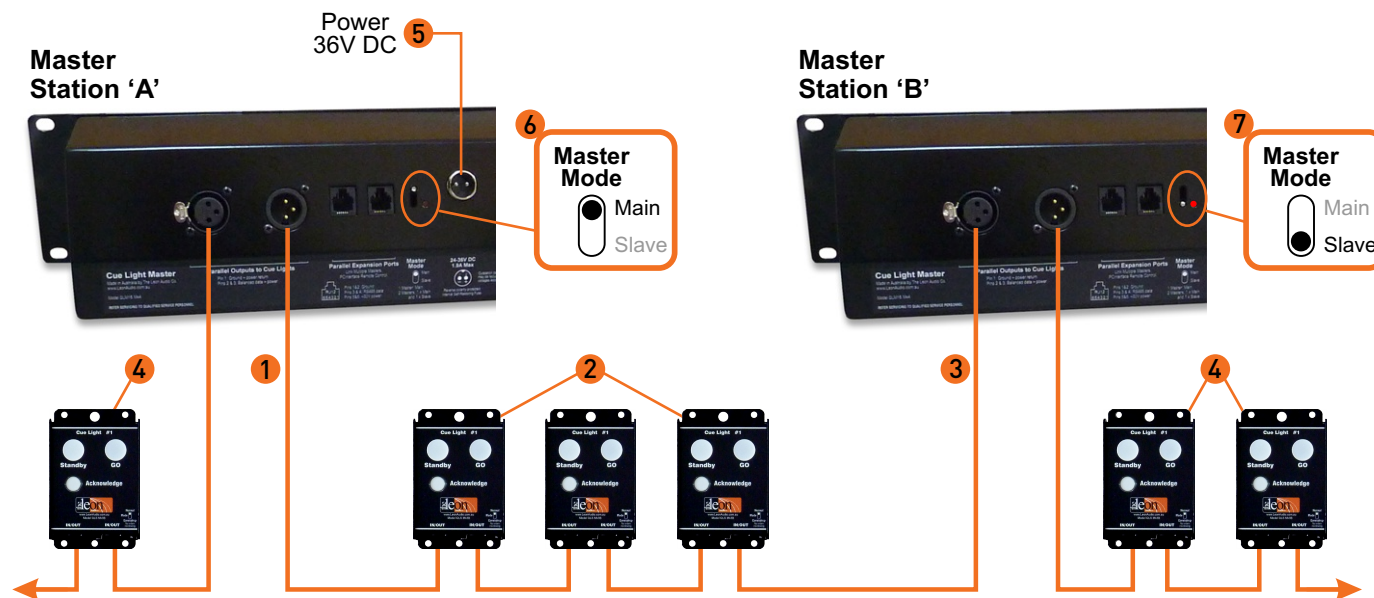

- Using standard 3 pin XLR microphone cables **1**, connect one or more Outstations **2** to either XLR connector on Master Station A's rear panel.
- Connect Master Station 'B' to the Cue Light wiring **3**. The Masters can connect anywhere to the Cue Light wiring. There is no specific order in which they need to be connected. The drawing above is just an example.
- Add additional Outstations if required **4**. Both XLRs on both Masters can be used at the same time.
- Connect a mains power supply to either Master Station **5**. Only one power supply is required.
- Set the Master Mode switch on Master 'A' to Main **6**.
- Set the Master Mode switch on Master 'B' to Slave **7**.



16 Channel Master Station (continued)

Dual Master Stations


Power

Only one of the two Master Stations needs to have its mains power supply connected. It does not matter which one. The other Master is powered from the Cue Light network wiring just as Outstations are powered.

It is possible to connect a mains power supply to each Master. This will however create an earth loop because each power supply is connected to mains earth. While this earth loop will not usually cause any problems, please be aware that just as an earth loop can cause hum in an analog audio circuit, there is also a small chance it may cause data corruption in a digital circuit. To avoid earth loops, use a single mains power supply.

Master Mode (Main/Slave) switch.

The **Master Mode** switch is on the rear panel. One Master must be set to **Main** and the other Master set to **Slave**. The Master Station that is set to Main will provide the configuration data for the system.

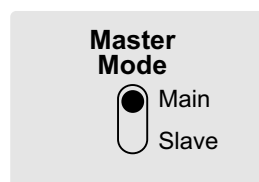

Master's Mode switch

Any configuration changes must be made via the Main Master Station. The configuration data is copied automatically in the background from the Main to Slave Master, allowing the Slave Master to configure and control the Cue Light Outstations directly should the Main Master be disconnected.

If both **Master Mode** switches should be set to the same position, a visual indication is given on both Master Stations by alternately flashing all the lamps on channels 1-8 with those on channels 9-16.

When a Master Station is running solo, the Mode switch position does not matter.

The configuration settings stored in the Slave Master will be overwritten by the configuration settings sent from the Main Master. If there are any configuration settings you wish to save in the Slave Master, copy them to one of the four user memory locations in the Slave before connecting it to the Main Master.

Use with the PCinterface

The optional PCinterface must be connected to the Main Master Station.

Typical application

The **Slave** Master is in the stage manager's console. The **Main** Master is at the production desk in the auditorium during rehearsals. Configuration changes are made at the production desk's Main Master. These changes are copied in the background to the stage manager's Slave Master. When rehearsals are complete, the Main Master is disconnected and the Cue Lights are controlled by the Slave Master.

Upgrade

All 16 channel Cue Light systems can be upgraded to support Dual Master operation if they do not currently support it.



Outstation types and configuration

Outstation Configuration

There are currently 3 main different types of Outstation that can be connected to the Cue Light Master Station.

- Standard Outstation (QLS Mk4)
 - Variants: Standard with Beeper (QLS-B Mk4)
 - Small Footprint (QLS-SM Mk4)
 - Small with Beeper (QLS-SM-B Mk4)
- Relay Outstation (QLR Mk4)
- Sensor Outstation (QTS Mk4)

There are a number of options that can be configured for each type of Outstation. Details of these options can be found in the following pages describing each type of Outstation. All options can be changed using the Master Station's **Configuration Editor**. (see page 41)

Any of the three Outstation types can be connected to any channel. The Master Station stores configuration (option) settings for each type of Outstation for each channel. When an Outstation is connected, the configuration data for that specific type of Outstation is used to configure that channel. When an Outstation is swapped for a different type, the configuration data for the newly connected type of Outstation is used by the Master to reconfigure that channel.

The Relay Outstation (QLR Mk4) and Sensor Outstation (QTS Mk4) also allow their configuration to be changed from their front panels. Any configuration changes made this way are sent to the Master Station and saved in the Master's memory for recall next time the system is powered up.

The Master Station has seven **files** that can be recalled by the user. There are two **Factory Default** files, one **Installer's Default** file and four **User** files.

The configuration settings **stay with the channel** and do not **follow the Outstation**. If an Outstation is re-addressed to a different channel, it will take on the configuration settings of the new channel. When an additional Outstation (in **Eavesdrop Mode**) is added to a channel it will take on the configuration settings assigned to that channel.

Different Types: Same channel, same time

Different types of Outstation (QLS, QLR or QTS) can be connected to the same channel at the same time but only one type will be operational.

The first Outstation type to be connected will become operational. Other Outstation type(s) added later will be non-operational until the first (operational) Outstation is unplugged. This situation can occur during scene changes.

When 2 or more different types of Outstation are connected at power up, the type with the highest precedence will become operational. Types with lower precedence will be non-operational until the operational Outstation is unplugged.

The order of precedence is :-

- Highest: Standard Outstation (or Small Footprint) QLS
- Relay Outstation QLR
- Lowest: Sensor Outstation QTS.

Indication of non-operational Outstation

On all types of Outstations, the Acknowledge button's back-light will flash.

Exceptions:

Sensor Outstation (QTS Mk4)
The three yellow buttons will flash.

Worklight (QWL)
The dimmer button's back-light will flash.



Cue Light Outstations

Standard	QLS Mk4
Standard + beeper	QLS-B Mk4
Small Footprint	QLS-SM Mk4
Small Footprint + beeper	QLS-SM-B Mk4



Standard Cue Light Outstation QLS Mk4
Outstation with Beeper QLS-B Mk4



Small Footprint Cue Light QLS-SM Mk4
Small Footprint with Beeper QLS-SM-B Mk4

The Beeper Outstations can be used as a Standard Outstation. They only beep when the red **Beep** button on the Master Station is pressed in conjunction with the Go or Standby button on the required channel. Beep button + Standby button = very short beep. Beep button + Go button = long beep. They can be made to beep whether a cue is active or not.

Beeper Outstations can also be programmed to beep when ever a Go cue is received. See **Beep-On-Go** on page 20.

Typical Operation (with factory default settings)

- **Press a Standby button on the Master Station.**
Standby lamps on both the Master Station and Cue Light Outstation flash.
- **Press the Outstation's Acknowledge button.**
The Standby lamps burn steadily.
- **Press a Go button on the Master Station.**
The Go lamps light. The Standby lamp goes out if it was on.
After 3 seconds the Go lamp flashes.
After 15 seconds, the Go lamp turns off.

See the "how to" videos at www.LeonAudio.com.au/CueLightVideos

It is not necessary to give a Standby cue before giving a Go cue. Go and Standby cues can be given or cancelled at any time regardless of any previous cue state.

The Go or Standby lamps can be turned off at any time by pressing their respective buttons a second time. Multiple Go cues are done by using the Go button only. Press Go to turn the Go lamp on, press it again to turn it off. The Go lamp is also programmable (on a per channel basis) between latching or non-latching (momentary acting) to allow for even faster cueing. Options can be changed using the Master Station's **Configuration Editor**. (see page 41)



Standard Outstations (continued)

Anywhere from 1 to 40 Outstations can be connected to the Master Station. Any number of these Outstations can be connected to any channel.

20mm Go and Standby lamps are bright, wide angle and dimmable in 5 steps from 100% down to 5%.

The Go and Standby lamps consist of four LEDs for each colour. The LEDs are wired in 2 circuits with two LEDs per circuit to provide redundancy should any of the LEDs fail.

The Acknowledge button is back lit so you can find it in the dark. The back-light only comes on when error free communication is established with the Master Station. The back-light winks slowly if data is lost as can happen if the 2 data conductors (XLR pins 2 & 3) on the interconnecting cables are shorted together.

Any Outstation can **Call** the Master Station. An Outstation's Acknowledge button has 2 functions. If a Standby cue is waiting to be acknowledged (Standby lamp flashing), pressing the Acknowledge button will cause the Standby lamps to burn steadily. Pressing the Acknowledge button at any other time will light the **Call** lamp on the Master Station.

The address of any Outstation can be changed in a few seconds without the use of any tools or fiddly DIP switches. See **Changing an Outstation's channel** (see page 28)


Outstations may be connected using either daisy chain, star and/or loop wiring topologies. Outstations can be wired up in any order. Outstation #2 does not have to follow #1 in a daisy chain.

Multiple Outstations can be used on the same channel by setting additional Outstations to **Eavesdrop Mode**. See **Multiple Outstations per channel** (see page 21)

Outstations can be added or removed while the power is on.

Flush mounted Acknowledge button, Go and Standby lamps are very difficult to break or shear off.

The 2mm steel outer case has a total of 6 mounting holes including a 10mm hole for attaching a hook clamp. A 3/8" microphone stand mount is at the centre of the rear cover. When mounted to a microphone stand with the front of the Outstation facing the ceiling, the Outstation can be viewed from 360 degrees.

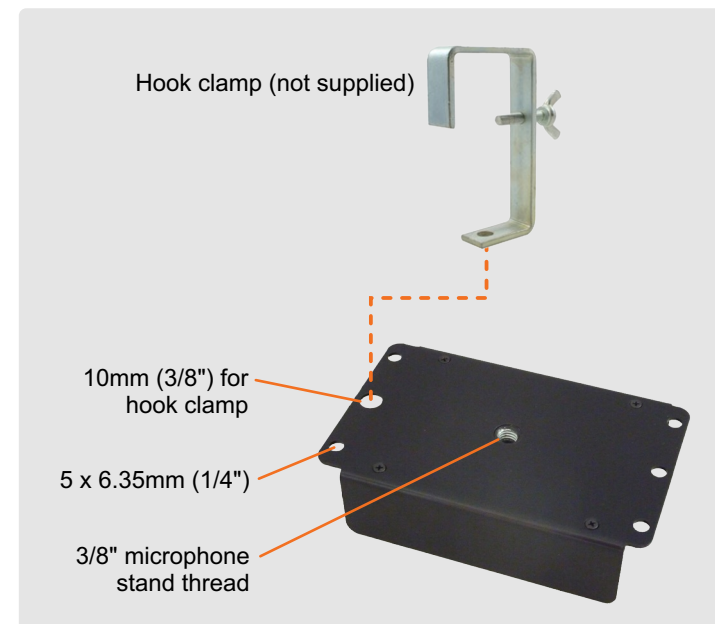

QLS rear cover showing mounting points.

Technical note

The Outstation data is balanced and uses transformer isolated RS485. (RS485 is what DMX uses.) The data uses a Group Encoding scheme with digital FM modulation for excellent noise immunity and error detection. Data is slow rate limited to reduce radiated electrical noise to a minimum. Outstations are powered by the **Phantom Power** principle where power is sent down the data pair with a ground return.



Standard Outstations (continued)

The following Outstation options can be programmed individually for each channel from the Master Station. To change any of these settings, see the **Master's Configuration Editor** on page 41.

Options	Factory Default	User Selectable Option
1 S/by colour	Yellow	Red
2 S/by Flash on Master	Flashes	Steady
3 S/by Flash on Outstation	Flashes	Steady
4 S/by latches	Latches	Momentary
5 S/by Dim on ACK	No	Dims on ACK
6 Go Flickers	Steady	Flickers
7 Go times out	Times out	Stays on
8 Go flashes	Flashes	Steady
9 Go latches	Latches	Momentary
10 Go & S/by interlocked	Interlocked	Independent
11 Call lamp enabled	Enabled	Call lamp off
12 Call lamp flashes	Flashes	Steady
13 ACK button back-light	On	Off
14 Beeper *	Enabled	Disabled
15 Beep-on-Go *	Silent	Beeps (4 choices)
16 Dimmer	100%	5-100% in 5 steps
17 Change colour on ACK	No change	Change colour

Cue Light options for the following Outstation types:
Standard (QLS), Standard with Beeper (QLS-B)
Small (QLS-SM) and Small with beeper (QLS-SM-B)

These 17 options can be combined in 96,304 different ways for *each* channel. Hopefully there is a combination that suits any special applications that may arise. Please let us know if there are any options that you would like but are not provided.

- **Standby Colour**

Selectable between red and yellow (default)
 Non-standard Go & S/by colours available to special order.

- **Standby Flash on Outstation**

Default setting is to flash.
 Some users prefer a non-flashing standby lamp.
 The Outstation's standby lamp can be set to flash or not independently of the standby lamp on the Master Station.
 To indicate an acknowledged cue on the Outstation, the Outstation can be set to **DIM on Acknowledge** if required.

- **Standby Flash on Master**

Default setting is to flash.
 If the Outstation's standby lamp is set to not flash, it is desirable to have the Master Station's lamp flash so that an indication of an Acknowledged cue can be seen.
 Some applications use the Outstations to indicate a safe/unsafe condition. In this situation the standby lamps on both the Master and Outstation can be set to not flash.

- **Standby Latches**

Default setting is to latch.
 If set to unlatched (momentary action), the Standby lamp will only be lit for as long as the Master Station's Standby button is pressed.

- **Standby Dim on Acknowledge**

Default setting is not to dim.
 When an Outstation's Standby lamp is set to not flash, the Outstation can be set to dim its Standby lamp to indicate an acknowledged cue.

- **Go lamp flickers**

Default setting is not to flicker.
 As an aid for colour blind users, the Go lamp can be set to flicker instead of burning steadily.
 The flicker rate is approximately 30Hz.

- **Go lamp times out**

Default setting is to time out after 15 seconds.
 Once a Go button on the Master has been pressed, the cue will cancel itself after 15 seconds allowing the stage manager to attend to other duties. It can be set to not time out and will stay on until either the Go or Standby button is pressed.

- **Go lamp flashes**

Default setting is to flash.
 Once a Go button on the Master Station has been pressed, the Go lamp will initially burn steadily but will flash after 3 seconds. It can be set to not flash and will burn steadily until it times out or is cancelled.
 The default time-out period is 15 seconds but is user adjustable from 1 to 16 seconds. See page 49.

* **Beeper** and **Beep-On-Go** options only apply when a Beeper Outstation (QLS-B or QLS-SM-B) is connected to that channel. Outstations without a beeper ignore the beeper settings.



Standard Outstations (continued)

- **Go Latches**

Default setting is to latch.

If set to unlatched (momentary action), the Go lamp will only be lit for as long as the Master Station's Go button is pressed. Handy for rapid fire cues.

- **Go and Standby Interlocked**

Default setting is interlocked.

When interlocked, pressing the Go button will cancel a Standby cue if it is active. Likewise, pressing the Standby button will cancel a Go cue if it is active. If set to non-interlocked, both Go and Standby lamps can be on at the same time.

One application is when Outstations are used as under-stage path lights where the Cue light system can also be easily fed from a battery backed supply for added under-stage safety.

- **Call lamps enabled**

Default setting is enabled.

If disabled, the Call lamp on the Master Station will not light. If a Standby cue is waiting to be acknowledged (Standby lamp flashing), pressing the Outstation's Acknowledge button will cause the Standby lamps to burn steadily.

Pressing the Acknowledge button at any other time will light the blue Call lamp on the Master Station if it is enabled.

- **Call lamps flash**

Default setting is to flash.

The blue Call lamp on the Master Station can be set to flash or burn steadily.

- **Acknowledge button back-light**

Default setting is to be lit.

The Acknowledge button's back-light can be turned off. One well known circus uses the Outstations to indicate the safety status of acrobatic equipment. In this case the back-light is turned off to improve the visibility of the Go and Standby lamps.

- **Beeper (QLS-B & QLS-SM-B Outstations)**

Default setting is to beep.

Beeper Outstations can have their beeper disabled. This is not normally required as the beeper only sounds when the red **Beep** button on the Master Station is pressed.

- **Beep-on-Go (QLS-B & QLS-SM-B Outstation)**

Default setting is to not beep.

Beeper Outstations can be set to beep when ever a Go cue is received.

The beep can be programmed to be off, 5mS, 50mS or 200mS duration. Changes are made by using the Master Station's **Configuration Editor** (see page 41)

A 5mS beep is heard as a discrete click rather than a beep. Handy for sound and lighting operators.

- **Dimmer**

The Outstation's lamp intensity can be dimmed in 5 steps from 100% down to 5%.

- **Standby change colour on Acknowledge**

Default setting is to not change colour.

An Outstation can be set to change the colour of its Standby lamp to indicate an acknowledged cue. Handy for use with non flashing Standby lamps.




Multiple Outstations per channel

Eavesdrop Mode

One might use multiple Outstations assigned to the same channel for some permanent function such as the fly floor, leaving the two Groups (A & B) free on the Master Station for other uses.

- When there is only one Outstation on a channel, set the Outstation's Mode switch to **Normal**. This Outstation will send return monitoring to the Master Station for driving the illuminated Go and Standby buttons.
- When there is more than one Outstation on a channel, set additional Outstations to **Eavesdrop** Mode. The **Eavesdrop** Outstations do not send return monitoring to the Master Station for driving the Go and Standby lamps.
- Cues can be Acknowledged from both **Normal** and **Eavesdrop** mode Outstations.

If more than one Outstation on any one channel is set to **Normal** mode, incorrect operation may result but no damage will be done.

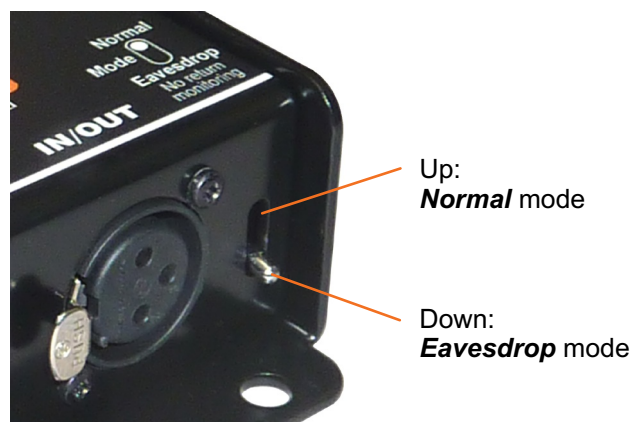

The Outstation's Mode switch selects between Normal and Eavesdrop modes.

Important

On any one channel:

- Set one Outstation to **Normal** Mode.
- Set all additional Outstations to **Eavesdrop** Mode.

Should only **Eavesdrop** Mode Outstations be connected to a channel, the Outstations will respond to Go and Standby cues but the Go and Standby lamps on the Master Station will not light as there is no return monitoring. The Fault lamp on that channel will light steadily to show that only **Eavesdrop** Mode Outstations are connected.

Any number of Outstations (up to the system maximum of 40) may be assigned to a single channel.

The Small Footprint Cue Light (QLS-SM Mk4) has no Eavesdrop mode switch. It runs permanently in Normal Mode but it can be used with other Standard Outstations (QLS Mk4) set to Eavesdrop Mode on the same channel.

Tip:

If an **Eavesdrop** Mode Outstation is on the end of a cable run and it is disconnected, there will be no indication on the Master Station as there will be no loss of return monitoring to be detected.

If possible, arrange the Outstations so that a **Normal** Mode Outstation (of any channel) is on the far end of a cable run. Should the cable break or become disconnected, the return monitoring from the **Normal** Mode Outstation will stop. This loss of return monitoring will be indicated by a flashing Fault lamp on the Master Station.



Relay Outstation QLR Mk4



Relay Outstation QLR Mk4



Relay Outstation connections

The Relay Outstation provides two voltage free changeover relay contacts controlled by the Master Station. **Relay A** is controlled by the Standby button. **Relay B** is controlled by the Go button. The relay contacts are rated at 2 amps 30 volts AC or DC.

An external **normally open momentary acting** Acknowledge button may be connected if required.

The Relay Outstations have 5 modes of operation

	Relay A Controlled by Standby button	Relay B Controlled by Go button
1	Momentary	Momentary
2	Latched	Latched
3	Momentary	Latched
4	Latched	Momentary
5	Cue Light Mode	Cue Light Mode

Momentary: Relay operates only while the button is pressed.
Latching: Press the button to set (turn on) the relay.
 Press it again to reset (turn off) the relay.

These 5 modes can be programmed via the Master Station's **Configuration Editor** (see page 41) or by using the **Setup button 1** on the Relay Outstation. To prevent accidental mode changes, the Setup button is interlocked with an **Enable button 2**. To change the mode, press and hold the grey **Enable button 2**. After a 1 second delay, the Setup button will light indicating that it is enabled. Use the Setup button to step through the 5 modes. Any configuration changes made this way are sent to the Master Station and saved in the Master's memory for recall next time the system is powered up. The Relay Outstation must be in **Normal Mode** for the Enable and Setup buttons to operate.



Relay Outstation (continued)

Multiple Relay Outstations can be used on the same channel by setting additional Outstations to **Eavesdrop Mode**. See **Multiple Outstations per channel** (page 21).

Changing the mode via the front panel of a Relay Outstation will simultaneously change the mode of all Relay Outstations connected to that channel.


When the Relay's **Cue Light mode** is selected, the following options are also available. These features can be programmed individually for each channel via the **Master Station's Configuration Editor**. (see page 41)

Option	Factory Default	User Selectable Option
S/by Flash on Master	Flashes	Steady
S/by Flash on Outstation	Flashes	Steady
S/by latches	Latches	Momentary
Go times out	Times out	Stays on
Go flashes	Flashes	Steady
Go latches	Latches	Momentary
Go & S/by interlocked	Interlocked	Independent
Call lamp enabled	Enabled	Call lamp off
Call lamp Flashes	Flashes	Steady
All Outstation lamps	Enabled	Off


These options function in the same manner as the options on a Standard Cue Light Outstation. See pages 19-20 for details of these options.

Relay Outstation (continued)


Wiring examples for the Relay Outstation

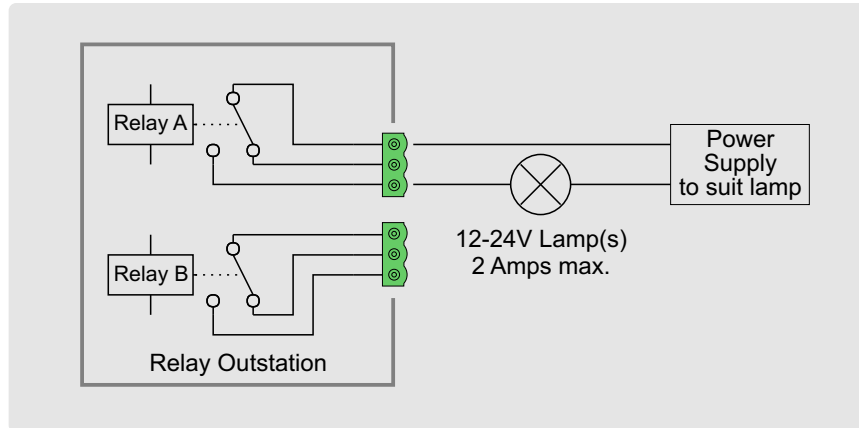

Relay Outstation driving a low voltage lamp

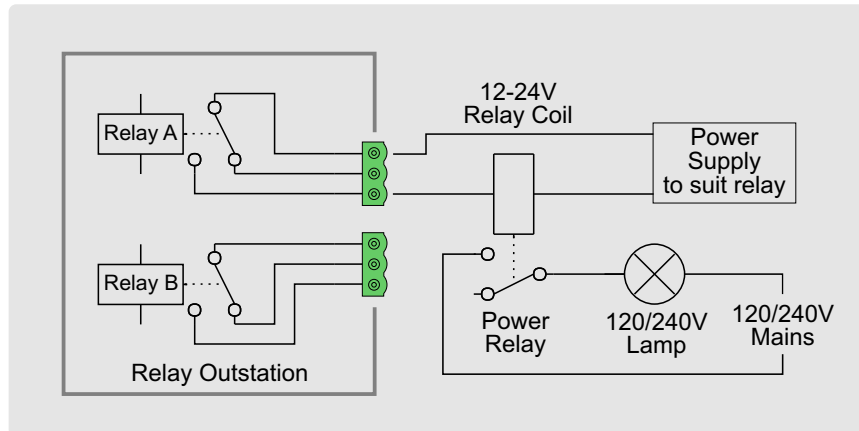

Relay Outstation driving a mains voltage lamp or a high power load

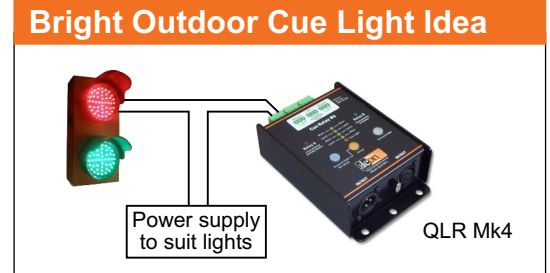

The relay contacts are *NOT* to be connected direct to mains wiring




Sensor Outstation QTS Mk4

The Sensor Outstation was originally developed for monitoring switch contacts on the locks of theatrical trap doors.

This Outstation monitors a single pole voltage free switch contact and displays its status on the Master Station.



Sensor Outstation QTS Mk4

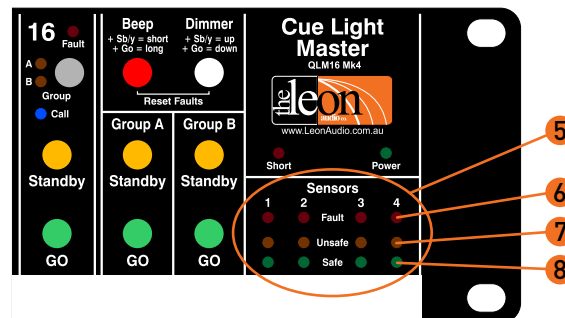

Sensor Outstations 1-4 have a dedicated display **5** on the Master Station.

The status of the monitored switch contact is displayed on three lamps labelled **Fault 6**, **Unsafe 7** and **Safe 8**. The Fault lamp indicates wiring errors between the monitored contact and the green connector on the Sensor Outstation. Assuming there is no fault condition, either the **Safe** or **Unsafe** lamps will be lit.

Sensor Outstations can also be used on channels 5-16. To indicate Fault, Safe and Unsafe conditions, these channels use the Fault, Go (safe) and Standby (unsafe) lamps of the respective channels.

The Sensor can be configured to display the **Safe** lamp when the monitored switch is either open or closed. This option is set by the **Safe when switch (open/closed)** button **3**.

3 Safe when switch...	Monitored Switch Contact	8 Safe Lamp
Open	Open	On
Closed	Open	Off

The **Unsafe lamp** can be set to flash or not. This option is set by the **Unsafe lamp (flash/steady)** button **2**.

To prevent accidental mode changes, the 3 yellow **setup buttons** on the Outstation are interlocked with a grey **Enable button 1**. To change the setup, press and hold the enable button. After a delay of 1 second, the 3 yellow buttons will light indicating that they are enabled and can now be used to change the Sensor's configuration.



Sensor Outstation (continued)

The switch contacts to be monitored are wired across the two outer terminals of a green 3 way Phoenix connector **2** on the Sensor Outstation. The centre Phoenix terminal is not used. The switch contacts can be either normally open or normally closed and must be voltage free.

The switch contacts can be wired using one of two circuits. **Circuit A** **1** provides a simple connection for the switch. Monitoring of the wiring between the Sensor Outstation and the switch contacts is not provided.


Circuit B **3** (recommended circuit) provides full monitoring of the wiring between the Sensor Outstation and the switch contacts. The additional monitoring is achieved by the use of two **End Of Line Resistors**. Circuit A does not use End Of Line Resistors. Resistor details are on the following page under Circuit B's description.

Circuit selection is made by the **End Of Line Resistor** button **4**.
One of two lamps **5** light to indicate the selected circuit.



Sensor Outstation QTS Mk4

Circuit A (No End Of Line Resistors) **1**

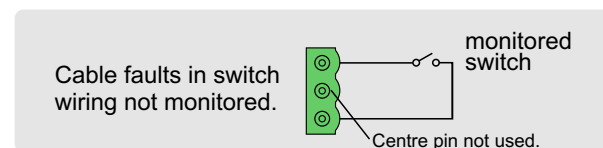

Circuit A. Basic switch wiring

Circuit A is the simpler of the two possible wiring methods but it is not recommended because it can not tell the difference between open circuit wiring to the switch and an open switch contact, or between a short in the switch wiring and a closed switch contact. Unplugging the switch's green Phoenix connector will be interpreted as an open switch contact.

The switching thresholds are as follows:-
0 to 400 ohms = switch closed
400 to 1,200 ohms = Fault
2,400 ohms and higher = switch open


Circuit B on the following page is the recommended circuit.

Only use Circuit A if your application can tolerate false indications when the green Phoenix connector **2 is unplugged or when cable faults in the switch wiring occur. If it can't, use Circuit B on the following page.**



Sensor Outstation (continued)

Circuit B (Recommended)

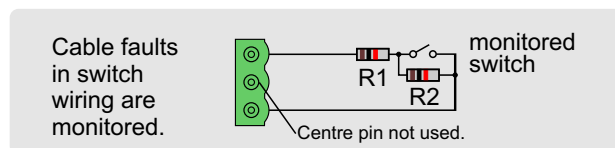

Circuit B. Switch wiring with 2 End Of Line Resistors

Circuit B allows the Sensor Outstation to discriminate between open circuit wiring to the switch and an open switch contact, and also between a short in the switch wiring and a closed switch contact.

Opens and shorts in the switch wiring cause the Fault lamps on both the Sensor Outstation and Master Station to light. Unplugging the switch's green Phoenix connector will also cause the Fault lamps to light.


This circuit requires two resistors to be installed adjacent to the switch. The resistors are known as **End Of Line Resistors** because they are installed at the **end of the line** next to the switch. To work correctly, they must be installed at the switch end of the cable, not at the connector end.

The resistors can be installed either way round. R1 can be installed on either side of the switch.

The switching thresholds are as follows:-
0 to 800 ohms = Fault
800 to 1,200 ohms = switch closed
1,200 to 1,600 ohms = Fault
1,600 to 2,400 ohms = switch open
2,400 ohms and higher = Fault

Resistors R1 and R2 are 1,000 ohm 1/4 watt 2% tolerance. Suitable resistors are supplied. Resistors with a higher power rating such as 1/2 or 1 watt, and a tighter tolerance such as 1/2 or 1% are also suitable. Spare resistors can be purchased from:
Farnell (Element 14) P/N 9341102 or
Digikey P/N 1.00KXTR-ND

Depending on the design of the switch used and the physical installation, the **End Of Line Resistors** can be installed directly on the switch or on a terminal block adjacent to the switch.

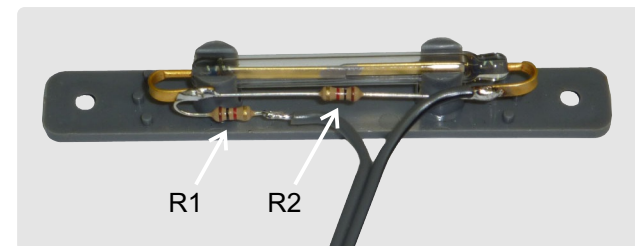

End Of Line Resistors soldered direct to a magnetically operated reed switch.

This example shows the concept of connecting the EOL resistors. It is not intended to show a mechanically robust solution.

End Of Line resistors and Phoenix connector are supplied. The external switch and cable to the switch are not supplied.

Technical Note

The signal fed to the switch contacts is transformer isolated 10V AC 5kHz sine wave. The Sensor Outstation monitors the current in the switch circuit.

When using Circuit B, 4 different current levels are monitored:-

- 1: Short circuit (Fault)
- 2: R1 in circuit (switch closed)
- 3: R1 & R2 in series (switch open)
- 4: Open circuit (Fault)

As the switch circuit is floating, either side of the switch can be shorted to earth without causing a malfunction.



600mW Work-Light Outstation

The Work-Light Outstation provides low level lighting for backstage and understage areas etc. Powered by the Cue Light system, it connects just like a standard Cue Light Outstation.



Work-Light Outstation
QWL-WH Mk4 (white LEDs)
QWL-BL Mk4 (blue LEDs)

The Work-Light offers reduced set-up time as no dedicated Work-Light wiring is needed. If the Master Station is powered from a UPS, the system will provide backstage/understage lighting in case of loss of mains power.

Built into a standard Outstation case, each Work-Light has white or blue LEDs and a 10 step dimmer. Both LEDs are the same colour. Total LED power is 600mW.

The dimmer setting is not controlled from the Master Station so as to allow Work-lights on the same channel to have individual dimmer settings.

The Work-Light can be turned on/off by a channel on the Master Station or it can be set to be on all the time by setting its address to channel 17.

When assigned to a channel on the Master Station, turn the Work-Light on/off by using the Master's Standby Button. The Go button can also be used but the **Go flashes** and **Go times out** options need to be cleared in the **Configuration Editor** for that channel.

The Work-Light provides monitoring to the Master Station by lighting both Go and S/by lamps when it is on. The Eavesdrop switch allows multiple Work-Lights to be used on the same channel in the same manner that multiple Cue Light Outstations can be used on the same channel. If the Work-Light is set to ch17 (on all the time) the Eavesdrop switch position does not matter as it is not used.

Adjusting the 10 step dimmer.

- 1: Press & hold the Dimmer button
- 2: Flick mode s/w once. (Its initial position does not matter)
- 3: Dimmer button flashes to show that set-up is active.
- 4: Press Dimmer button to step through 10 dimmer settings.
- 5: When 100% is reached, it rolls back to minimum.
- 6: Dimmer button flashes fast when at 100%
- 7: To exit and save new dimmer setting, flick mode switch again, returning it to its original position.

The QLM16 Master Station is capable of driving at least 40 Cue Light Outstations. Each Work-Light counts as 2 Outstations because they draw more current. The 40 Outstation limit can often be exceeded provided cable runs are relatively short (typically < 200m) and a heavy gauge cable (such as Belden 9463) is used to reduce voltage drop. For example, a system with 20 standard Outstations and 20 Work-Lights can be built provided all cable losses are taken into account.

Please consult us when designing systems which exceed 40 **equivalent** Outstations.



Changing an Outstation's channel

... without the use of any tools or switches

An Outstation's channel number is stored in the Outstation in non-volatile EEPROM memory so that it will be remembered even when the power is off.

- 1: Press & hold the Acknowledge* button while plugging in the Outstation's XLR cable. Release the button when the Standby lamp flashes.
- 2: The Outstation will flash its Standby lamp a number of times corresponding to the unit's currently programmed channel. It will repeat after a short pause. To leave the channel unchanged, jump to step 4.



- 3: Press the Go button on the Master Station of the channel who's number you wish to assign to the Outstation. The Outstation will reboot and be ready for use.

All done.

- 3: Press the Outstation's Acknowledge button the number of times coinciding with the new channel. e.g. 3 times for channel 3. It will flash the newly saved channel after a 2 second pause. Valid channels are 1 to 16 inclusive. More than 16 presses of the button are ignored. If you make a mistake, just repeat step 3.

- 4: Exit the channel programming mode by doing any one of the following:
 - Unplug the XLR, wait a few seconds and plug it back in again.
 - Press and hold the Acknowledge* button until it reboots (takes about 3 seconds)
 - Nothing. It will keep flashing its channel for about 20 seconds and then it will reboot.

All done.

* For Sensor Outstation (QTS Mk4) press the middle yellow button. For Work-Light (QWL Mk4) press the Dimmer button.




Outstation Cables

Design objective:

Wire up the venue in any manner using almost any type of three core cable, and then plug anything in anywhere.

We have come very close to meeting the design objective with only few limitations on cable type when lengths exceed 500m. The Outstations may be wired using either daisy chain, star and/or loop wiring topologies. Any combination is permitted. When a cable breaks or becomes disconnected in the loop configuration, the system remains 100% operational.

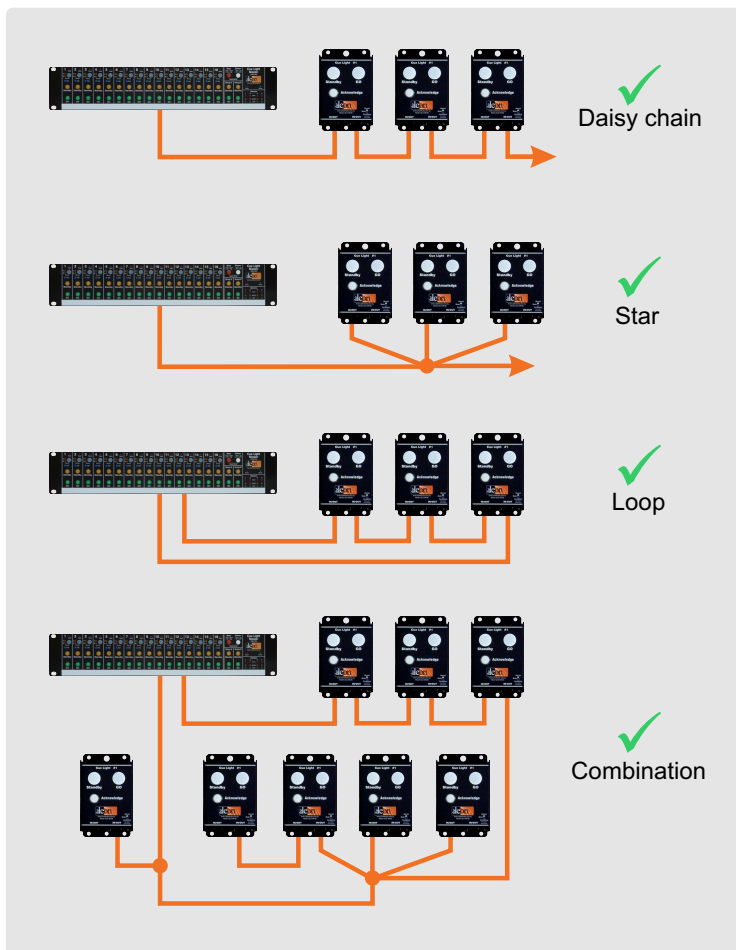

Permitted Outstation wiring topologies

It is suggested that the Cue Light system be restricted to a maximum of about 40 Outstations and a total of 2,000m (6500 ft) of cable. These numbers can often be exceeded. See **What's the Limit** on page 38.

The Outstations are connected by a one pair screened cable fitted with 3 pin XLR connectors. Any standard microphone cable, DMX or AES/EBU digital audio cables (wired with 3 pin XLRs) will work. Star Quad and multicore (snake) cables may also be used. Digital snakes can not be used as they do not pass power or allow bi-directional signals to be sent down the cable.

XLR pin	Cable
1	Screen
2	Data +ve
3	Data -ve

XLR wiring

Both ends of a cable are wired the same.

All Outstations are powered from the Master Station using the Phantom Power principle where balanced data is sent down the inner pair (XLR pins 2 & 3). Power at about +30V DC is superimposed on the data pair (XLR pins 2 & 3) and returned through the ground/screen conductor (XLR pin 1). Outstations can be connected or disconnected while the power is on.

Even though the system is very resistant to interference, it is good engineering practice to install the Cue Light wiring away from mains wiring. The Cue Light system will also work with cables wired incorrectly with XLR pins 2 & 3 crossed as is sometimes found with microphone cables.

For permanent installations, it is permitted to have dozens or even hundreds of outlets spread around a venue. The Master Station can be plugged into any one of these outlets. Outstations are then connected to the nearest convenient outlets.

Outstations can be wired up in any physical sequence. Outstation #2 does not have to follow #1.



Outstation Cables (Continued)

There are literally hundreds of different cable types that are suitable for use with the Cue Light system. The two primary cable characteristics of interest for the Cue Light application are **wire size** and **cable capacitance**.

A brief cable guide

Where the total cable length is:-

less than 500m (1640 ft)

Standard XLR microphone cable or virtually any 1 pair 24AWG screened cable can be used.

greater than 500m (1640 ft)

18-22 AWG cables with **core to core** capacitance of less than 80pF/m (24pF/ft) should be selected.

Suitable cables include:-

- 24 AWG: Belden 9501, 9841
Alphawire 5471C
Electra EAS7201P
- 20 AWG: Belden 9463

Commercially available DMX cables (with 3 pin XLRs) or digital audio (AES/EBU) cables are also suitable. These cables are commonly available with 20, 22 or 24 AWG conductors. Check that the wire size of the selected cable is adequate for the cable length proposed.

Wire Size

The size of the copper wire in a cable determines the voltage drop on that cable. Larger copper wires decrease the voltage drop and allow for longer cable runs with more Outstations connected.

The size of the copper wire is measured in either cross sectional area such as **square mm** or by wire gauge such as **AWG** (American Wire Gauge). Bigger AWG numbers represent smaller wires. 24 AWG is the smallest size that should be used with 18-22 AWG being preferable. The actual wire size required for an installation will depend on the length of the cable runs and the maximum number of Outstations to be connected to each run.

A following table (see page 35) gives a guide as to wire size Vs length Vs number of Outstations that can be connected to each cable run.

The cable's screen provides the return path for the Outstation's power. A screen with low resistance is preferred. A woven copper screen usually has lower resistance than a wrapped foil screen.

Characteristic Impedance (measured in ohms) is a common cable specification. It can be ignored in this application. It is not a measure of a cable's resistance.

If many Outstations are placed on the end of a cable run that is either very long and/or very thin, there may be excessive voltage drop for the Outstations to keep working normally. Rather than stop working due to the lack of voltage, the Outstations automatically dim their lamps to reduce power consumption and hence reduce the voltage drop.

Lower cable resistance = longer possible cable runs due to lower voltage drop.



Outstation Cables (Continued)

Cable Capacitance

Cable capacitance reduces the amplitude of the data signal by storing some of that signal as an electric charge in the cable.

Cable branches with nothing plugged into them will also decrease the data signal's amplitude due to the cable's capacitance which is still connected to the circuit.

Cable capacitance is measured in pF (Pico Farad) per foot or metre and is determined by the cable's construction and insulating materials used.

Cable capacitance can be ignored where the total cable length in an installation is less than about 500m (1640 ft). Where more than 500m of cable is used, cables with a **core to core** capacitance of less than 80pF/m (24pF/ft) should be selected.

Low capacitance cables have core insulation materials like polyethylene or polypropylene.

They are often specified as Industrial Twinax or for use in applications such as RS422/RS485, AES/EBU digital audio or DMX.

Any of these low capacitance cables are suitable for the Cue Light system but we still need to check that their wire size is adequate for the cable length proposed.

See table on page 35.

Cables using PVC insulation for the inner conductors have high capacitance and high losses for digital signals. They should be avoided for long cable runs or permanent wiring. PVC outer jackets however are OK.

Most analog microphone cables use PVC insulation and can be used where the total cable length in an installation is less than about 500m (1640 ft).

PVC insulated cables are also OK for use as tails between permanently installed 3 pin XLR outlets and the Outstations in large installations. In this case they only form a small percentage of the total cable in the system and do not degrade the overall system performance significantly.

Lower cable capacitance = longer possible cable runs due to less attenuation of the data signal.



Outstation Cables (Continued)


Unused cable branches must be included in the total cable length, even if no Outstations are connected to that cable run, because the cable's capacitance is still connected to the circuit.

There are three basic wiring configurations; these are **daisy chain**, **star** and **loop**. Most installations use a combination of star and daisy chain.


Daisy Chain wiring

Daisy chain wiring uses less cable than star wiring, but it may need to be of a heavier gauge because many Outstations may be connected to any given cable run. As the daisy chain uses the least amount of cable it has the lowest cable capacitance resulting in the strongest possible data signal allowing the recommended total of 2,000 metres to be easily exceeded.


There are two main variations for the daisy chain wiring: Temporary and permanently wired.

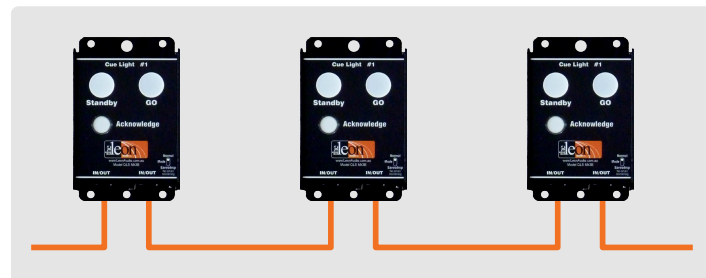

Temporary wiring:
Unplugging an Outstation disconnects other Outstations.

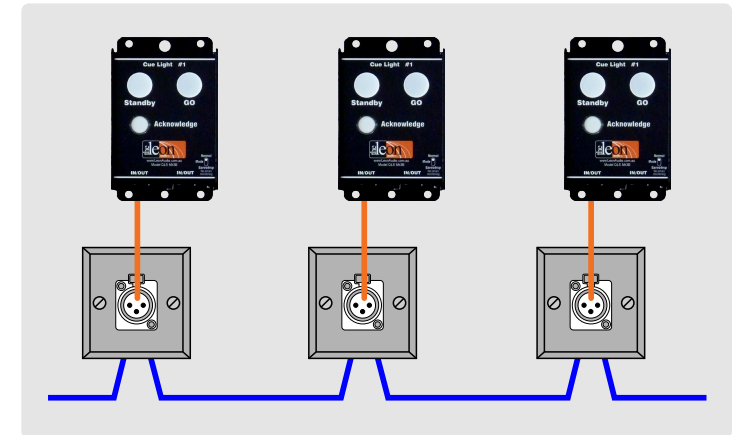

Permanent wiring:
XLR wall sockets are permanently wired (blue).
Unplugging an Outstation does not affect other Outstations.

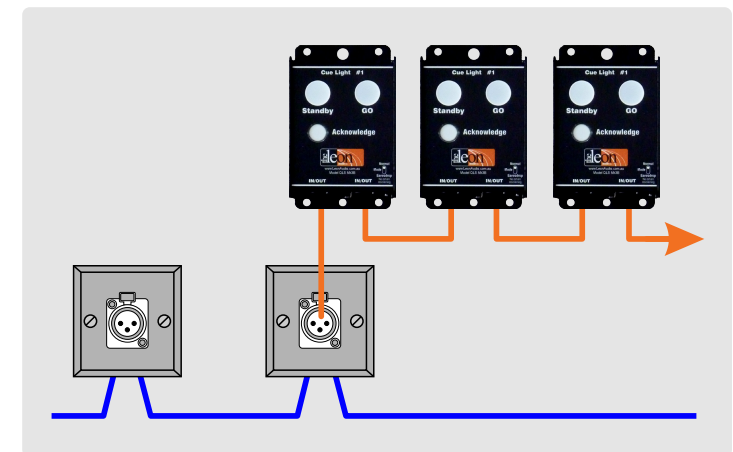

Multiple Outstations may be connected at each wall socket




Outstation Cables (Continued)

Star wiring

At the star point, all the cables are simply wired in parallel. This is often done at a patch panel. Don't forget to include unused cable branches in the total cable length because the cable's capacitance is still connected to the circuit.

There are two main weaknesses with Star wiring, both of which result in greater attenuation of the data signal (this is not a desirable feature)

- 1: Star wiring uses more cable than daisy chain wiring, and as a result has higher overall cable capacitance.
- 2: The star configuration can also have considerable attenuation for signals travelling from an outer extremity towards the star point (Tech note: This is due to the capacitance of all the legs of the star driven from the impedance of one leg. This makes a very nice low pass filter with which to attenuate the data signal).

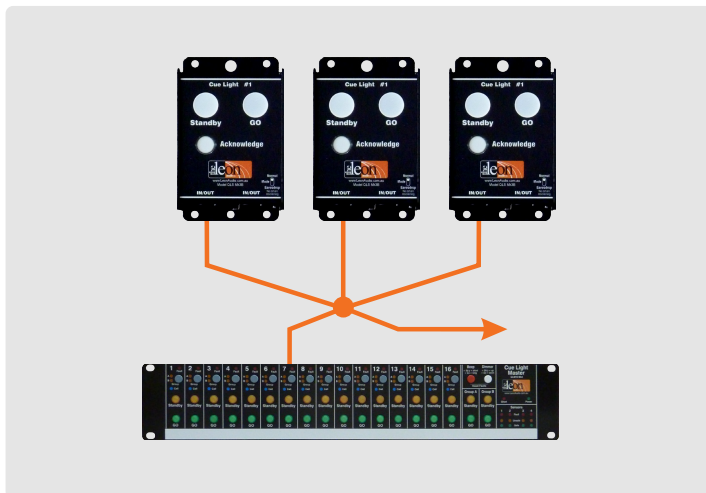

Star wiring


While the star configuration works well and may be convenient, it is not the optimum wiring arrangement due to its increased attenuation of the data signal. It is best used in combination with daisy chain and loop configurations.

Loop wiring

Loop wiring has the advantage that when a cable breaks or becomes disconnected, the system remains 100% operational.

When designing a loop configuration, allow for the worst case scenario where either of the 2 cables are unplugged at the Master Station. The cable gauge needs to be selected such that all of the Outstations can operate on what has now become a single long run.

Refer to the table on page 35.

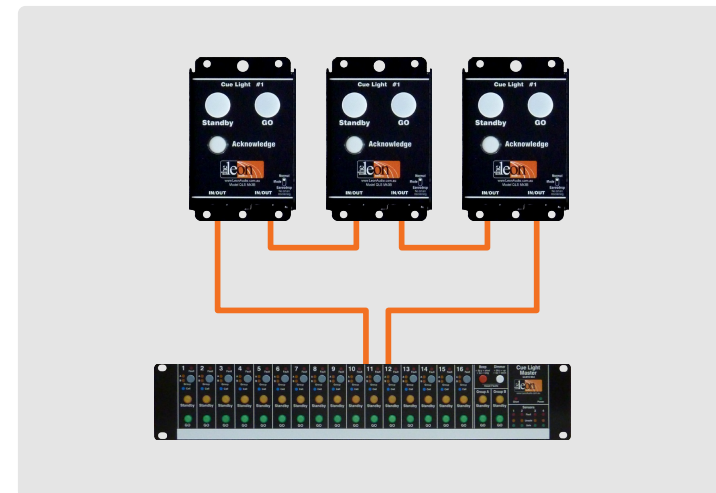

Loop wiring



Lower loss cables

		Nominal wire size (AWG)		Cable Length													Notes
		Conductor	Screen	Metres	200	400	600	800	1000	1200	1400	1600	1800	2000	3000	4000	
				Feet	650	1300	2000	2600	3300	4000	4600	5200	5900	6500	9850	13100	
Belden	9860	16	12		204	102	68	51	40	34	29	25	22	20	13	10	3
Generic	14 AWG	14	14		171	85	57	42	34	28	24	21	19	17	11	8	3
Belden	9250 (9816)	18	10		165	82	55	41	33	27	23	20	18	16	11	8	3
Mogami	3173	18	14		134	67	44	33	26	22	19	16	14	13	8	6	3
Generic	16 AWG	16	16		108	54	36	27	21	18	15	13	12	10	7	5	3
Belden	9463	20	16		80	40	26	20	16	13	11	10	8	8	5	4	3
Belden	8719	16	18		79	39	26	19	15	13	11	9	8	7	5	3	3
Apollo	Scroller cable	22	24		71	35	23	17	14	11	10	8	7	7	4	3	1, 3
Generic	18 AWG	18	18		69	34	23	17	13	11	9	8	7	6	4	3	3
Belden	9463F	20	18		69	34	23	17	13	11	9	8	7	6	4	3	3
Belden	3105A	22	16		68	34	22	17	13	11	9	8	7	6	4	3	3
Belden	8760 (2421C)	18	20		54	27	18	13	10	9	7	6	6	5	3	2	3
Belden	9460	18	20		50	25	16	12	10	8	7	6	5	5	3	2	3
Belden	9841 (6412)	24	16		45	22	15	11	9	7	6	5	5	4	3	2	
Belden	8762	20	20		44	22	14	11	8	7	6	5	4	4	2	2	
Generic	20 AWG	20	20		44	22	14	11	8	7	6	5	4	4	2	2	
CAT5	(3 pairs as gnd)	24	20 equiv		38	19	12	9	7	6	5	4	4	3	2	1	2
Mogami	3159	24	20		35	17	11	8	7	5	5	4	3	3	2	1	
Generic	22 AWG	22	22		27	13	9	6	5	4	3	3	3	2	1	1	
Belden	1419A & 9729	24	24		25	12	8	6	5	4	3	3	2	2	1	1	
Canare	L-2E5AT	24	24		24	12	8	6	4	4	3	3	2	2	1	1	
Belden	9501 (5471C)	24	24		23	11	7	5	4	3	3	2	2	2	1	1	
Electra	EAS7201P	24	24		19	9	6	4	3	3	2	2	2	1	1	0	
Olex	JD1PS485A3	24	24		18	9	6	4	3	3	2	2	2	1	1	0	
Klotz	OT206	24	24		17	8	5	4	3	2	2	2	1	1	1	0	
Generic	24 AWG	24	24		17	8	5	4	3	2	2	2	1	1	1	0	

Alphawire.com equivalent in brackets

Number of Outstations connected Vs Cable Length and Size

An installation usually consists of a number of cable runs of different lengths. Use this table as a guide as to how many Outstations may be connected on the end of **each** run for various cable types and lengths. As a guide, most installations would be covered by cables in the shaded area.

If a cable is not listed here, it does not mean it is not suitable.

All of these cables are of the low capacitance variety and consist of a selection of generic, general purpose data, and types used by various customers.

For cable lengths not shown, halving a given length will allow double the number of Outstations shown. e.g. 3 Outstations on 1,000m of 24 AWG, becomes 6 Outstations on 500m of cable.

If in doubt about your chosen cable, please [email us](#)

AWG (American Wire Gauge) is the nominal size of the conductors. Bigger AWG numbers represent smaller wires. The screen (shield) might be bigger or smaller than the conductor size. A bigger screen will move a cable towards the top of the table (this is desirable).

Note 1: Scroller cable. 22 AWG data pair wired to XLR pins 2 & 3. 2 x 14 AWG power cores wired in parallel with the 24 AWG screen to XLR pin 1.

Note 2: Cat5/6 cable. One pair wired to XLR pins 2 & 3. Remaining 3 pairs wired to XLR pin 1.

Note 3: Red numbers are outside the system's power supply capability and can not be achieved. Restrict the number of Outstations to 45 or less.




Outstation Cables (Continued)

Cat 5/6 cables

CAT5/6 cable can be used but the screened variety is preferred to reduce noise pickup from adjacent cables. If the CAT5/6 cable has a screen, tie it to XLR pin 1 at both ends.

It is suggested that any CAT5/6 cables used for the Cue Light wiring be terminated in 3 pin XLR connectors so that they can not be accidentally cross patched with PC network cabling as power from the Cue Light system may damage computer network components.

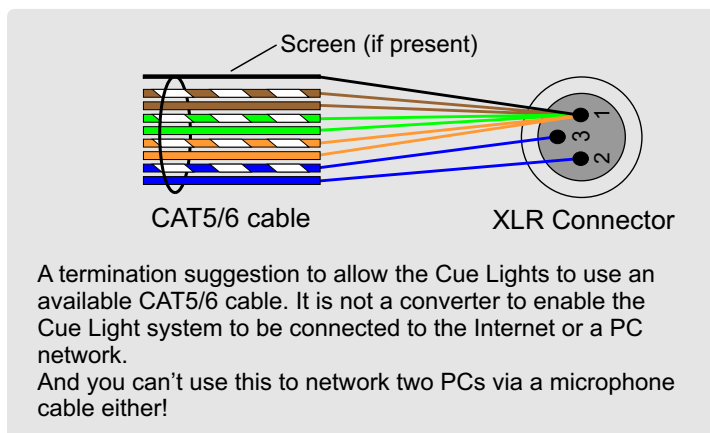

Suggested Cue Light XLR to CAT5/6 wiring

The **star** configuration is often wired using CAT5/6 cable as this follows the convention used for computer networks. There is no technical reason to do this. The Cue Light system is not bound by the 100m (330 ft) limit imposed on computer networks. It also does not use (or need) a hub or switch at the star point. Cables at the star point are simply wired in parallel. This is often done at a patch panel.

By limiting the maximum length of all legs of a star wired using CAT5/6 to 200m (650 ft), a Master Station and up to 19 Outstations can be placed anywhere on the star. The Master does not need to be at the star (common) point. The 200m figure is derived from the cable table on page 35 where it can be seen that 19 Outstations can be connected at the end of 400m (1,300 ft) of CAT5/6. The distance between any 2 extremities on a star with a 200m per leg limit is 400m.

Outstation Cables (Continued)



A wiring example

This example shows how a theatre might be permanently wired using a mix of daisy chain and star wiring. Backbone cable segments in green are wired with a 20AWG cable as these would have a large number of outlets attached to them. All other cables (red) are 24 AWG.


The Master Station could be located at XLR point #8 during rehearsals. The cable between the patch panel and points #8 would have to carry 100% of the Outstation load, hence the thicker 20 AWG cable.

Small venues, or those using 8 or less Outstations, could be cabled entirely in 24 AWG.

Multiple Outstations can be connected to any of the permanently wired XLR outlets shown in this example.

Suitable cables include:-

- 24 AWG: Belden 9501, 9841
Alphawire 5471C
Electra EAS7201P
- 20 AWG: Belden 9463

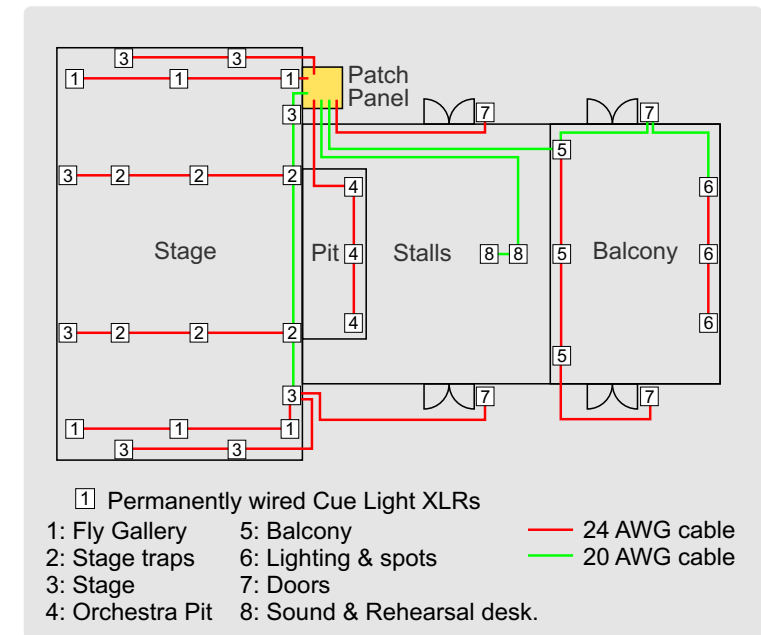

Theatre wiring example.




Outstation Cables (Continued)

What's the cable Limit?

There is no magic cable length at which the Cue Light system suddenly stops operating. We have suggested that the Cue Light system be restricted to a maximum of about 40 Outstations and a total of 2,000m (6500 ft) of cable. These numbers are fairly conservative and provide a reasonable safety margin. You should not experience any trouble wiring up the network with the architecture* of your choice by using cable lengths and Outstation numbers as per the table on page 35.

We have included a few examples of test setups to the right to give an idea of what the system's limits actually are.

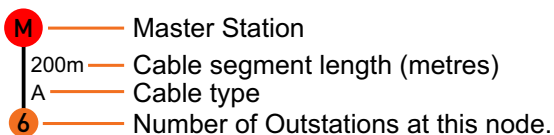

Cable types
 A: 20AWG Belden 9463
 B: 24AWG Electra EAS7201P
 C: CAT5 (One pair wired to XLR pins 2 & 3. Remaining 3 pairs wired to XLR Pin 1)

The limit in Fig 1 was voltage drop on the cable. A thicker cable would be needed to allow for a longer cable run.

In figures 2-4, connection to the Master station was via a patch panel with parallel wired connectors.

The limit for figures 2-4 is the power supply's ability to provide the inrush current that the Outstations draw when power is first applied.

The "worst case" situation occurs when the cable lengths are very short. In this case the inrush current is at its highest and the power supply can only drive 40 Outstations. As the cable lengths are increased, the inrush currents are reduced due to the cables's resistance, allowing more than 40 Outstations to be connected.

* Network architecture: star, daisy chain, loop or combination of these.

 


Fig 1. Cable total: 1,000m Outstations: 36

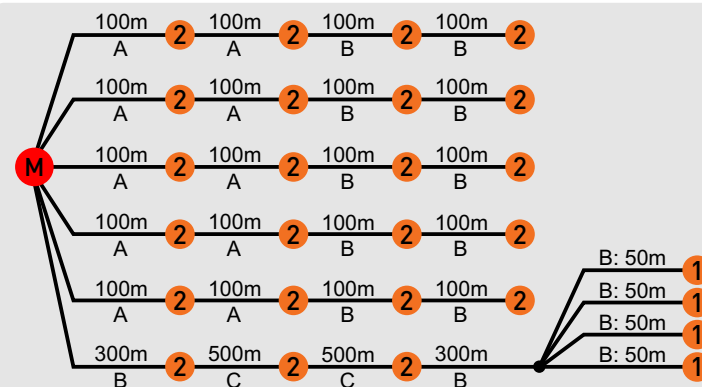


Fig 2. Cable total: 3,800m Outstations: 50

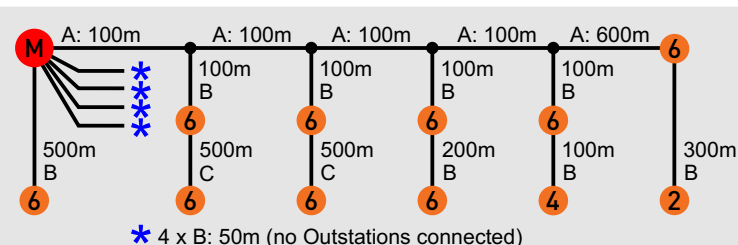


Fig 3. Cable total: 3,700m Outstations: 60

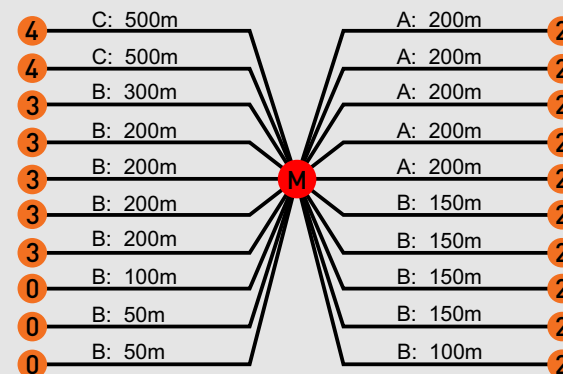


Fig 4. Cable total: 4,000m Outstations: 43



More than 16 channels


The wiring between a Master Station and its Outstations is known as a wiring **universe**. A Master Station and its associated universe supports a maximum of 16 channels. With multiple Outstations per channel, there may be up to 40 Outstations connected to these 16 channels.

Where more than 16 channels are required, multiple Master Stations must be used.

A separate **universe** (cable run) is required for each Master Station.

A 2 pair cable can be used but avoid foil screened cables that use one drain wire for the whole cable.

We need a screen with a low resistance as this is the return path for power from the Outstations.

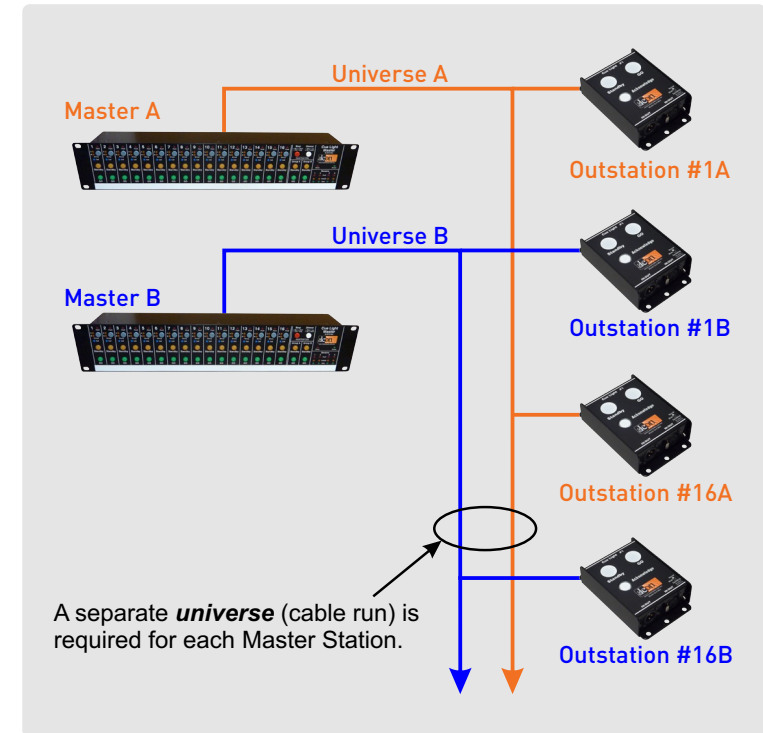

Multiple Master Stations require one wiring UNIVERSE per Master Station



Linking multiple Master Stations


When multiple Master Stations are used, the 4 **Group Master** buttons **1** can be linked across the Masters via an **Expansion Port** **2** on the Masters' rear panels. (The group feature allows cues across multiple channels to be triggered by the press of a single button). Up to 6 Master Stations can be linked.

Pressing any of the four Group Master buttons on any linked Master Station, will electronically press the corresponding Group Master button on all other linked Master Stations. This allows cues across multiple Master Stations to be triggered by the press of a single button. Group buttons are discussed in detail on page 11.

Multiple Master Stations are linked by daisy chaining their Expansion Ports **2** with the supplied RJ12 patch leads. Either Expansion Port can be used as they are simply wired in parallel.

The cable is of the 6 core flat telephone type. These cables are intended to be short patch leads because they are unshielded and untwisted, however, lengths up to 50m (150 ft) can be used.

The Expansion ports are also used for connection of the PC interface unit.

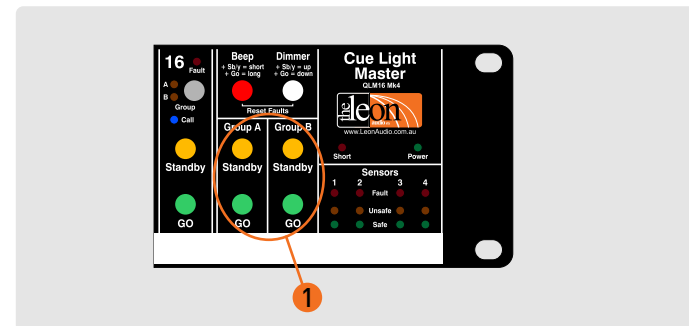

The 4 Group A & B Master buttons are linked.



RJ12 Expansion Ports



Master Station's Configuration Editor

The **Configuration Editor** allows the Master Station and individual Outstations to be customized to suit specific needs.

The Configuration Editor is very simple to use **once** you have read the instructions. These instructions should be read in conjunction with having a Master Station in front of you.

Read at least pages 43 and 44 first or you may waste a lot of time. Or you may prefer to watch the "how to" videos at www.LeonAudio.com.au/CueLightVideos

Two alternate button overlays are used when the editor is active. These overlays are on the following page and will be the only page you will need to refer to for all common configuration changes once you are familiar with how the Configuration Editor works.

The Cue Light system's settings are stored in an internal file called **ShowTime** which can be edited by the user. When shipped from the factory, the **ShowTime** file contains factory default settings so that the Cue Lights are ready to run straight out of the box.

Changed settings can be saved to one of 4 internal user files which can be recalled as needed. Two sets of Factory default settings and an Installer's default settings can also be recalled.

To recall any one of these files to run the Cue Light system, open the required file in the **Configuration Editor**, save to the ShowTime file and then exit the editor.

There are 8 files that can be opened and edited. Changes can be saved to 5 of them.

- 1: ShowTime file (read/write)
- 2: Factory Defaults with red Standby lamps. (read only)
- 3: Factory Defaults with yellow Standby lamps. (read only)
- 4: Installer's Defaults (read only)
- 5: User settings #1 (read/write)
- 6: User settings #2 (read/write)
- 7: User settings #3 (read/write)
- 8: User settings #4 (read/write)

1: ShowTime file (read/write)

When the Master Station powers up, it reads the ShowTime file to run the Cue Light system.

After editing any file, changes must be saved to the ShowTime file if you want those settings to run the Cue Light system.

Temporary changes to the system can be made by editing the ShowTime file (and saving changes to it) without saving changes to any of the 4 User files.

The ShowTime and 4 User files are stored in non-volatile EEPROM memory within the Master Station so that their contents will be remembered even when the power is off.

2 & 3: Factory Defaults (read only)

These 2 files contain a standard setup. Both files are identical except that one configures the Outstation Standby lamps to red and the other to yellow.

To recall the Factory Default settings, open one of the two Factory Default files in the **Configuration Editor**, save to the ShowTime file and then exit the editor.

4: Installer's Defaults (read only)

This file contains settings that the installer decided should be the default for your system. You may edit these settings and save changes to the ShowTime file and/or one of the four User files. Changes can not be saved by the user to the **Installer's Default** file.

To recall the Installer's Default settings, open the Installer's Default file in the **Configuration Editor**, save to the ShowTime file and then exit the editor.

(If you are an installer or system integrator, please [email us](mailto:email@leonaudio.com.au) for details on how to save your custom settings to the **Installer's Default** file)

5 - 8: User settings 1 to 4 (read/write)

These 4 files are used to save any configurations that the user creates. To recall saved User settings, open one of the four User files in the **Configuration Editor**, save to the ShowTime file and then exit the editor.

Configuration Editor

Alternate button overlays

Please read pages 43 & 44 first. These pages will walk you through the basic steps of using the Editor. Or you may prefer to watch the "how to" videos at www.LeonAudio.com.au/CueLightVideos

- 1 Start the Configuration Editor.
Editor starts with the ShowTime file opened and option #1 selected.
- 2 Open one of 8 files
- 3 Select options page 1 or 2
- 4 Select an Option to edit
from the grey & yellow boxes
- 5 Edit options on a channel by channel basis
Green button lit = option active
- 6 Save to the ShowTime file if you want those settings to run the Cue Light system.
Save to User files 1-4 (optional)
- 7 Exit the Editor

To start the Editor press 3 buttons for 4 seconds

Page 1: Cue Light Outstation and Master configuration

Channel	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Cue Light Options	Yellow Standby	S/by flash on Master	S/by flash on Outstn	Standby Latches	Dim on ACK	Go flickers	Go times out	Go flashes	Go latches	Go & S/by interlocked	Call lamp enabled	Call lamp flashes	ACK back-light on	Beepers enabled	Beep on Go	Dimmers to 100%
Master Options	S/by change color on ACK				Master's Address	Group btms linked	Go Cue duration		Installer defaults	User 1	User 2	User 3	User 4	Show Time	Factory default red	Factory default yel
Edit Channel	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green

Legend: defaults Read only files Read/write files

Buttons: **Edit all 16 ch.** (Green), **Select page** (Purple), **Open** (Yellow), **Save** (Yellow), **Exit** (White)

Page 1 Cue Light & Master.

Page 1: Cue Light Outstation and Master configuration

Page 2: Relay & Sensor configuration

Channel	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Relay Options	A: Mom B: Mom	A: Latch B: Latch	A: Mom B: Latch	A: Latch B: Mom	Cue Light Mode	S/by flash on Master	S/by flash on Outstn	S/by latches	Go times out	Go flashes	Go latches	Go & S/by interlocked	Call lamp enabled	Call lamp flashes	All lamps enabled	
Sensor Options	Safe when open	Unsafe flashes	Two EOLR	All lamps enabled					Installer defaults	User 1	User 2	User 3	User 4	Show Time	Factory default red	Factory default yel
Edit Channel	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green

Legend: defaults Read only files Read/write files

Buttons: **Edit all 16 ch.** (Green), **Select page** (Purple), **Open** (Yellow), **Save** (Yellow), **Exit** (White)

Page 2 Relay & Sensor.

Page 2: Relay & Sensor configuration



Master Station's Configuration Editor (continued)

The editing sequence is:

- 1: Start the **Configuration Editor**
- 2: Open one of 8 files *
- 3: Select an option to edit
- 4: Edit that option on a channel by channel basis using the Green buttons. (Green button lit = option active)
- 5: Save changes to 1 of 5 files
(Save to the **ShowTime** file if you want those settings to run the Cue Light system)
- 6: Exit the Editor

Configuration settings for each of the 3 types of Outstation:-

QLS: Cue Light Outstation

QLR: Relay Outstation

QTS: Sensor Outstation

are stored in each channel's settings. The Master Station uses the appropriate configuration data for the type of Outstation that is connected.

It is not necessary to have any Outstations connected to be able to edit the Cue Light's settings.

Starting the Configuration Editor

To start the Configuration Editor, press and hold these 3 buttons **1** until the 16 blue Call lamps light (takes about 4 seconds).

Release the 3 buttons.

The Configuration Editor has 2 pages.

Toggle between the 2 pages with this button **2**

Page 1: Settings for the Master and Cue Light Outstations:

Standard Outstation (QLS)

Beeper Outstation (QLS-B)

Small Outstation (QLS-SM)

Small Outstation with beeper (QLS-SM-B) **3**


When page 1 is selected, these lamps flash

Page 2: Settings for the Relay (QLR) and Sensor (QTS) Outstations.

When page 2 is selected, these lamps flash **4**

* The Editor starts with the ShowTime file opened at page 1 and with option #1 (Yellow Standby) selected. If you wish to edit the ShowTime file, there is no need to re-open it but no harm is done should you do so.

To start the Editor
press these 3 buttons
for 4 seconds

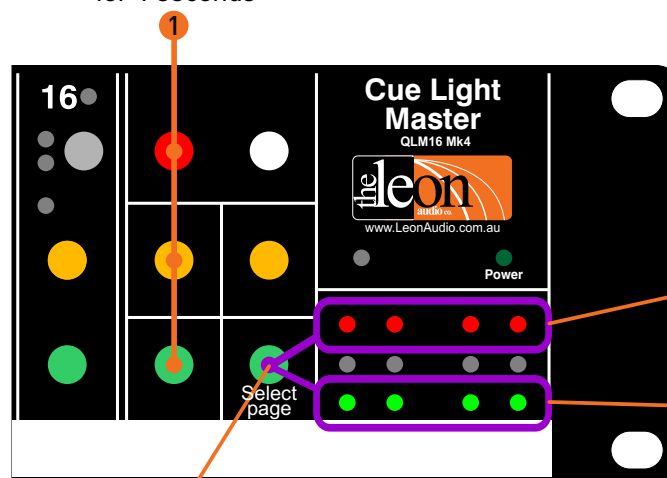

3 Page 1.
Cue Light Outstation
and Master configuration.

4 Page 2.
Relay & Sensor configuration.

Toggle Pages **2**



Master Station's Configuration Editor (continued)

To Open a file.

- Press and hold the **File Open** button **1**
Eight yellow buttons will light showing the 8 files that can be opened.
- Select one of these 8 files by pressing its yellow button.
- Release the buttons.

To Save a file.

- Press and hold the **File Save** button **3**
5 Yellow buttons will light showing the 5 files that can be written to. These are **User 1-4** and **ShowTime** files.
- Select one of these 5 files by pressing its yellow button.
- Release the buttons.
- Save to the **ShowTime** file if you want those settings to run the Cue Light system.
- Exit the Editor once done **2**
Any unsaved changes will be lost when exiting.


Restoring default or previously saved settings.

- Start the Editor
- Open the required file.
- Save to the **ShowTime** file.
- Exit the editor.

Important!

After editing or opening any file, the file must be saved to the **ShowTime** file if you want those settings to run the Cue Light system.

Configuration settings for each of the 3 types of Outstation:-
QLS: Standard Cue Light Outstation
QLR: Relay Outstation
QTS: Sensor Outstation
are stored in each channel's settings. The Master Station uses the appropriate configuration data for the type of Outstation that is connected.

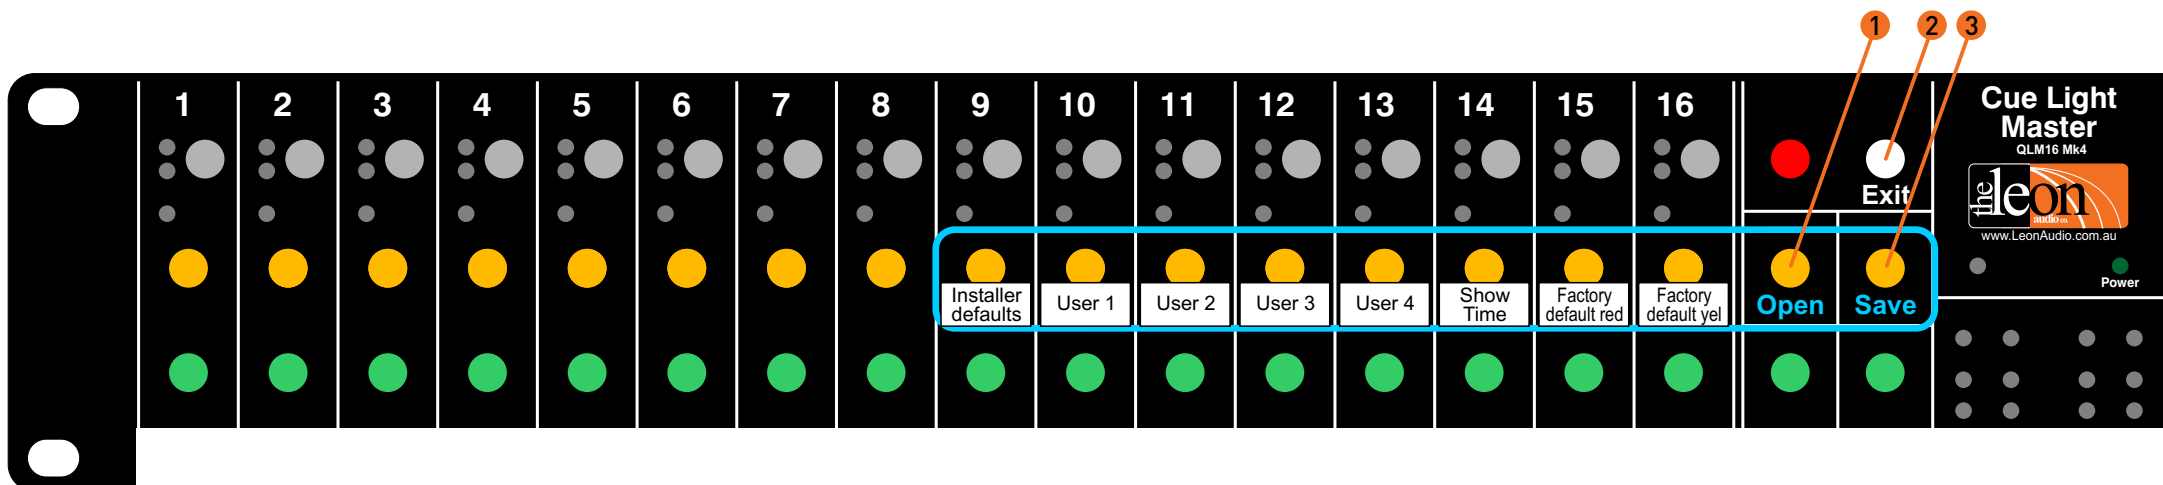

File controls. Common to pages 1 and 2



Master Station's Configuration Editor (continued)

Cue Light Outstation options

Each Outstation has a number of options that can be edited. Outstations do not need to be connected to be able to edit a channel's options.

Use the grey buttons within the grey outline **3** to select a Cue Light option to be edited. When any of these buttons are pressed, two adjacent orange lamps **1** will light to indicate the selected option.

Edit selected option on a channel by channel basis using the Green buttons **4** (Green button lit = option active)
Toggle all 16 channels at once by using the **Edit all 16 ch** button **5**


Example: Change the Outstation's Standby colour

Start the Configuration Editor.
Select Page 1 **6**
Select **Yellow Standby** option **2**
When Green button (1-16) is lit, Standby colour = yellow.
When it is not lit, Standby colour = red.
Save to the ShowTime file.
Save to User file 1-4 (optional).
Exit the Configuration Editor.

Options	Factory Default	User Selectable Option
1 S/by colour	Yellow	Red
2 S/by Flash on Master	Flashes	Steady
3 S/by Flash on Outstation	Flashes	Steady
4 S/by latches	Latches	Momentary
5 S/by Dim on ACK	No	Dims on ACK
6 Go Flickers	Steady	Flickers
7 Go times out	Times out	Stays on
8 Go flashes	Flashes	Steady
9 Go latches	Latches	Momentary
10 Go & S/by interlocked	Interlocked	Independent
11 Call lamp enabled	Enabled	Call lamp off
12 Call lamp flashes	Flashes	Steady
13 ACK button back-light	On	Off
14 Beeper *	Enabled	Disabled
15 Beep-on-Go *	Silent	Beeps (4 choices)
16 Dimmer	100%	5-100% in 5 steps
17 Change colour on ACK	No change	Change colour

Cue Light options for the following Outstation types:
Standard (QLS), Standard with Beeper (QLS-B)
Small (QLS-SM) and Small with beeper (QLS-SM-B)

* **Beeper** and **Beep-On-Go** options only apply when a Beeper Outstation (QLS-B) is connected to that channel. Outstations without a beeper ignore the beeper settings.

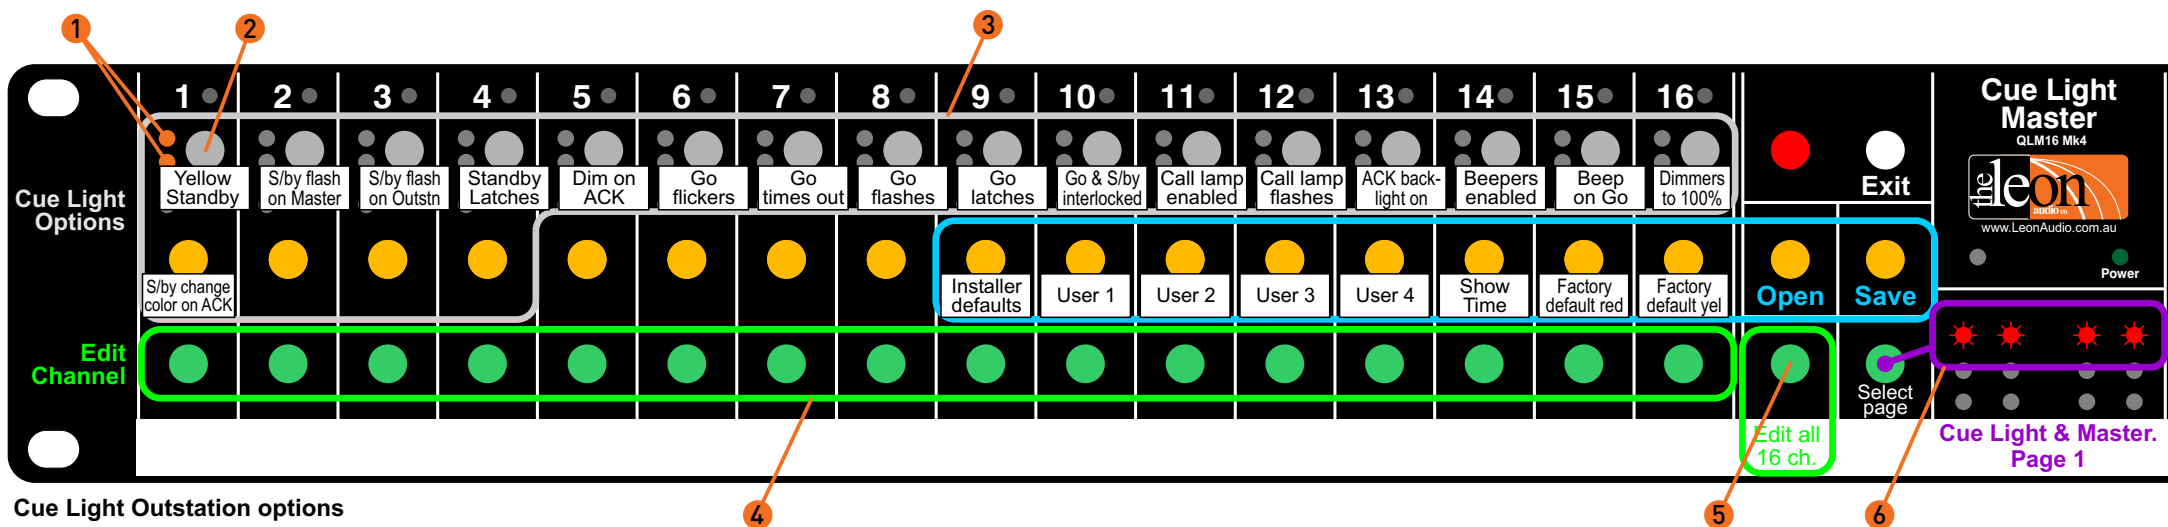



Master Station's Configuration Editor (continued)

Beep-On-Go option

There are 3 beep durations that can be programmed for each channel as well as an **off** option.

The **Beep-On-Go** Modes are:

1= off, 2 = 1mS, 3 = 50mS, 4 = 200mS

The Fault lamps **1** at the top of channels 1 to 4 are used as an indicator of the **Beep-On-Go** mode.

Editing multiple channels

When more than one channel (green buttons 1-16) is initially selected, the red mode indicator lamps **1** will be off. This is done to prevent an ambiguous display should the channels be set to different modes.

Pressing the red button will cause a mode lamp to light as all selected channels are now set to the same mode.


Example: Edit Beep-on-Go (single channel)

Start the Configuration Editor.
 Select Page 1 **4**
 Select **Beep-On-Go** option **2**
 Press a Green button (1-16) for the channel to be edited.
 Use the red button **3** to cycle through the four **Beep-On-Go** modes as indicated on red lamps 1-4 **1**
 1 = off, 2 = 1mS, 3 = 50mS, 4 = 200mS
 Save to the ShowTime file.
 Save to User file 1-4 (optional).
 Exit the Configuration Editor.

Example: Edit Beep-on-Go (multiple channels)

Start the Configuration Editor.
 Select Page 1 **4**
 Select **Beep-On-Go** option **2**
 Press multiple Green buttons (1-16) for the channels to be edited.
 Use the red button **3** to cycle through the four **Beep-On-Go** modes as indicated on red lamps 1-4 **1**
 1 = off, 2 = 1mS, 3 = 50mS, 4 = 200mS
 Save to the ShowTime file.
 Save to User file 1-4 (optional).
 Exit the Configuration Editor.

The editor will only allow you to review the mode settings for the channels one channel at a time. If more than one channel is selected, the red lamps will be off.

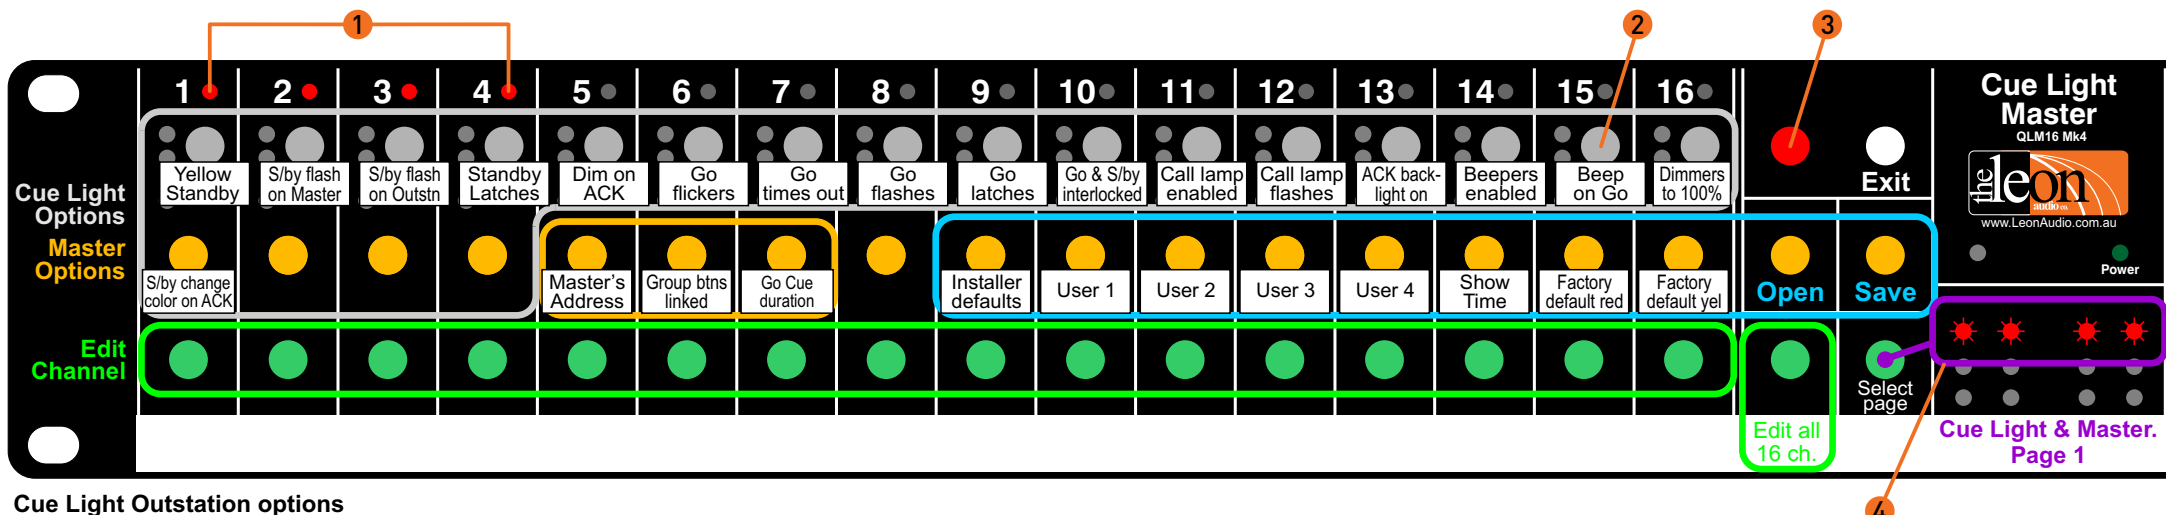

Cue Light Outstation options



Master Station's Configuration Editor (continued)

Dimmer option


The **Dimmers to 100%** button **1** resets the dimmer intensity for all 16 channels to 100%.
The green **Edit Channel** buttons **2** are not used.
There is no provision to set individual channels to intensities lower than 100%.

If dimmer intensities other than 100% need to be saved to one of the User files, do the following:

- Save your initial configuration to the **ShowTime** file.
 - Exit the Editor. The **ShowTime** file will be loaded by the Master's operating system to run the Cue Lights.
 - Press and hold the white **Dimmer** button. Now press either the Standby (increase) or Go (decrease) button on the desired channel to adjust the dimmer intensity to that required.
- Any changes made are written to the **ShowTime** file.
- Start the editor.
The editor starts with the **ShowTime** file already loaded. This will also include the dimmer changes just made.
 - Save to one of the four User files.
 - Exit the Editor.

Tip:

Multiple channels can be dimmed simultaneously by assigning channels to one of the 2 Groups and then using that Group's Master Go and Standby buttons to increase or decrease the dimmer intensities.
(This tip only applies when the Editor is not active.)

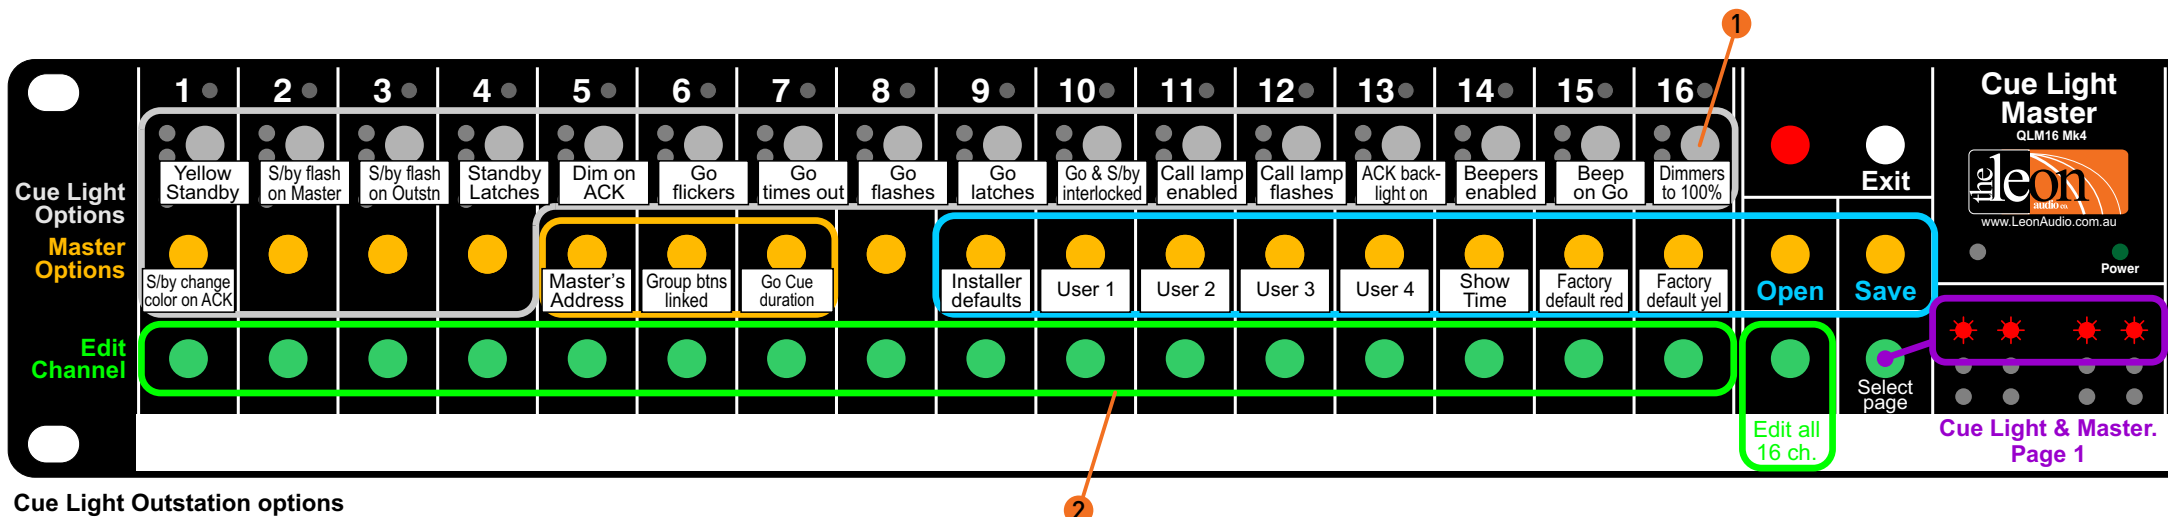

Cue Light Outstation options



Master Station's Configuration Editor (continued)

Master Station options

There are only 3 options **3 5 6** specifically for the Master Station.

1: Master Station's address **3**

When multiple Master Stations are used with the PCinterface unit (QL-PCi Mk4), each Master Station must be set to a different address in the range of 1-6. The Master's address setting is ignored if the PCinterface is not connected.

The Master's address can be changed by opening any of the 7 available files. When saving, the Master's address is not saved with individual files, but is saved separately into its own dedicated memory location.

Example: Change the Master Station's address

Start the Configuration Editor
 Select Page 1 **7**
 Select **Master's Address** option **3**
 Using the red button **2** cycle through the addresses 1-6 as indicated on red lamps 1-6 **1**
 Save to the ShowTime or User 1-4 files.
 Exit the Configuration Editor


2: Group Master buttons linked **5**

Multiple Master Stations can be linked so that a press of one of the Group Master buttons (just to the right of channel 16) can trigger multiple cues across multiple Master Stations.

This setting is ignored by a single unlinked Master Station. (Master Stations are linked via the RJ12 **Expansion Port** on the Master's rear panel).

Example: Linking the Group Master buttons

Start the Configuration Editor
 Select Page 1 **7**
 Select the **Group btns linked** option **5**
 The button will light to indicate the selection.
 Press the green button **4** immediately beneath it to toggle the option.
 Green button lit = linked
 Green button off = unlinked.
 Save to the ShowTime file
 Save to User file 1-4 (optional)
 Exit the Configuration Editor

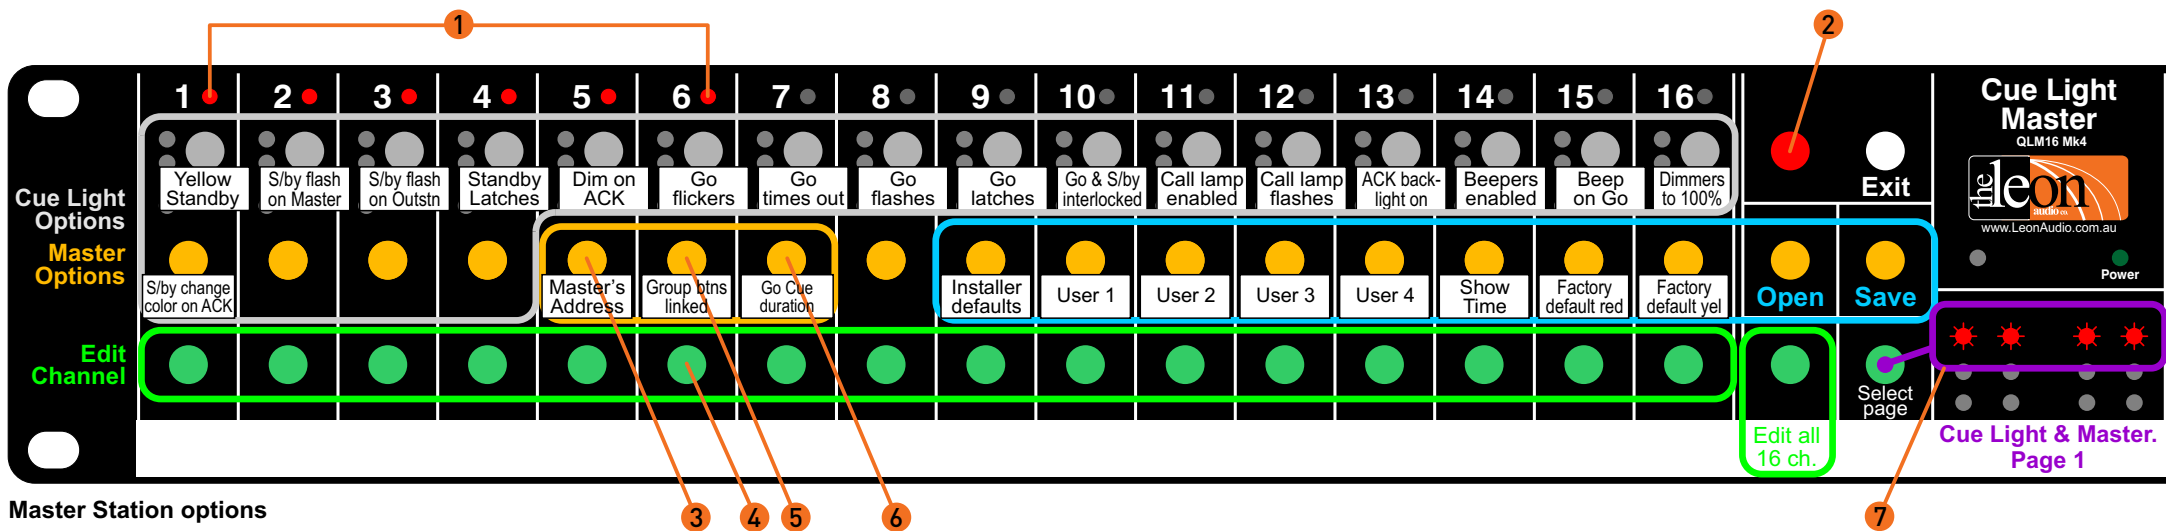

Master Station options

Master Station's Configuration Editor (continued)



Master Station options

3: Go Cue Duration 3

The default settings for the Go Cue are for the Go lamp to light steady for 3 seconds and then flash for 12 seconds, giving a total Go Cue duration of 15 seconds.

This option allows the total Go Cue duration to be set between 1 and 16 seconds in 1 seconds steps. This setting applies to all channels.

Individual channels can still be set to flash or burn steady. Individual channels can still be set to timeout (as per the Go Cue duration) or remain on until manually turned off.


For Go Cue durations of 3 to 16 seconds, there will be an initial 3 seconds of steady Go lamp followed by 0-13 seconds of flashing Go lamp.

For durations of 1 to 3 seconds, there will be 1-3 seconds of steady Go lamp. The Go lamp does not have flashing phase.

Example: Change the Go Cue duration.

Start the Configuration Editor
 Select Page 1 4
 Select **Go Cue duration** option 3
 Using the red button 2 cycle through the Go Cue duration 1-16 (in seconds) as indicated on red lamps 1-16 1

Save to the ShowTime file
 Save to User file 1-4 (optional)
 Exit the Configuration Editor

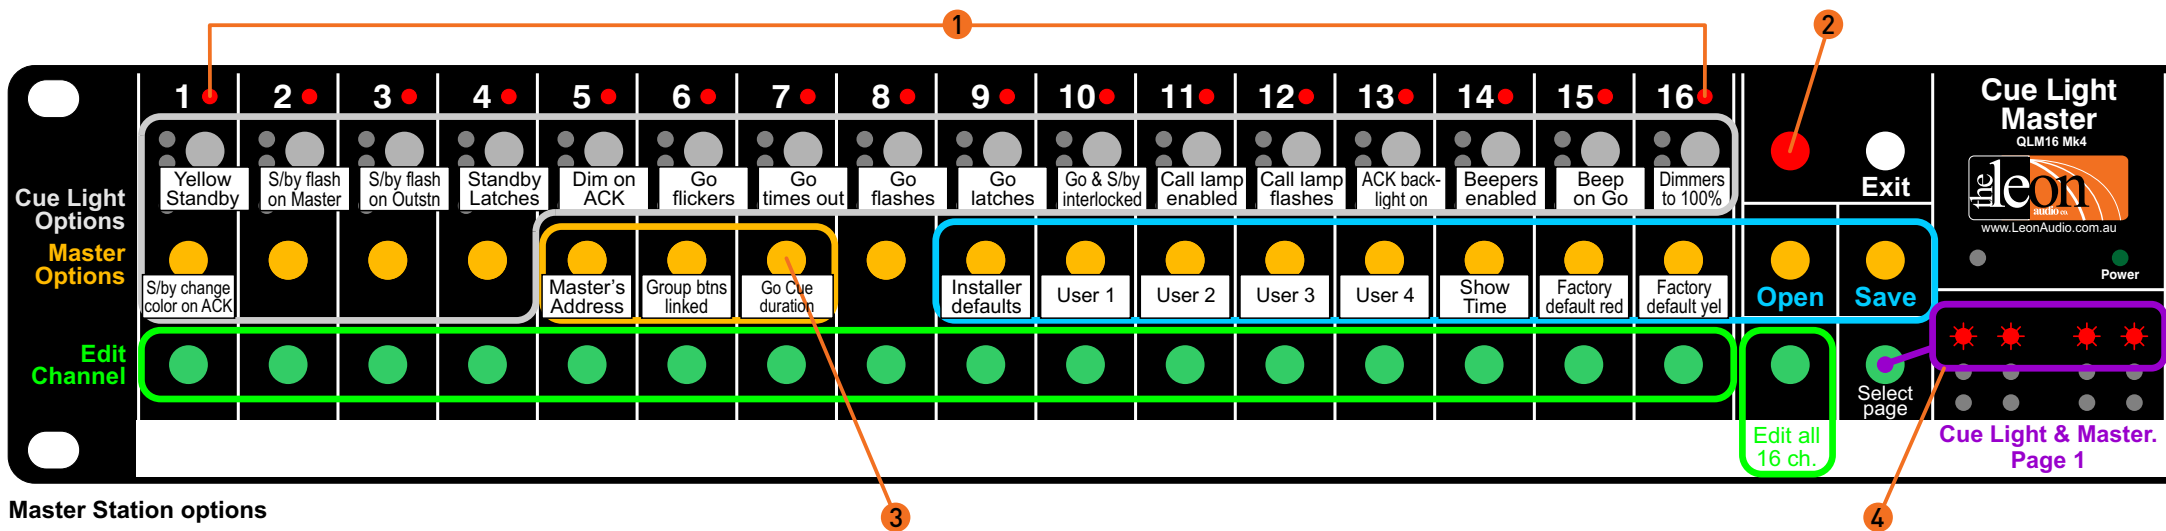

Master Station options



Master Station's Configuration Editor (continued)

Relay Outstation options

Each Relay Outstation has a number of options that can be edited. Outstations do not need to be connected to be able to edit a channel's options.


Configuration settings for each of the 3 types of Outstation:-
 QLS: Cue Light Outstation
 QLR: Relay Outstation
 QTS: Sensor Outstation
 are stored in each channel's settings. The Master Station uses the appropriate configuration data for the type of Outstation that is connected.

- The Relay's options can be grouped into 3 different classes.
- 1: Five modes determine how the Relay contacts operate ①
 - 2: Seven additional options for when the **Cue Light mode** is selected ②
 - 3: Three miscellaneous options ③

The Relay Outstation has 5 operating modes which can be changed from either the Relay Outstation's front panel or from the **Configuration Editor**.
 When a mode is changed by using the Outstation's front panel buttons, the change is sent to the Master Station and saved in the Master's **ShowTime** file for recall next time the system is turned on. To save **ShowTime** file changes to one of the 4 User files, follow the steps in the example below.

Example: Saving changes made to the ShowTime file

Start the Configuration Editor.
 The Editor opens with the **ShowTime** file already loaded.
 Save the **ShowTime** file to User file 1-4.
 Exit the Configuration Editor.

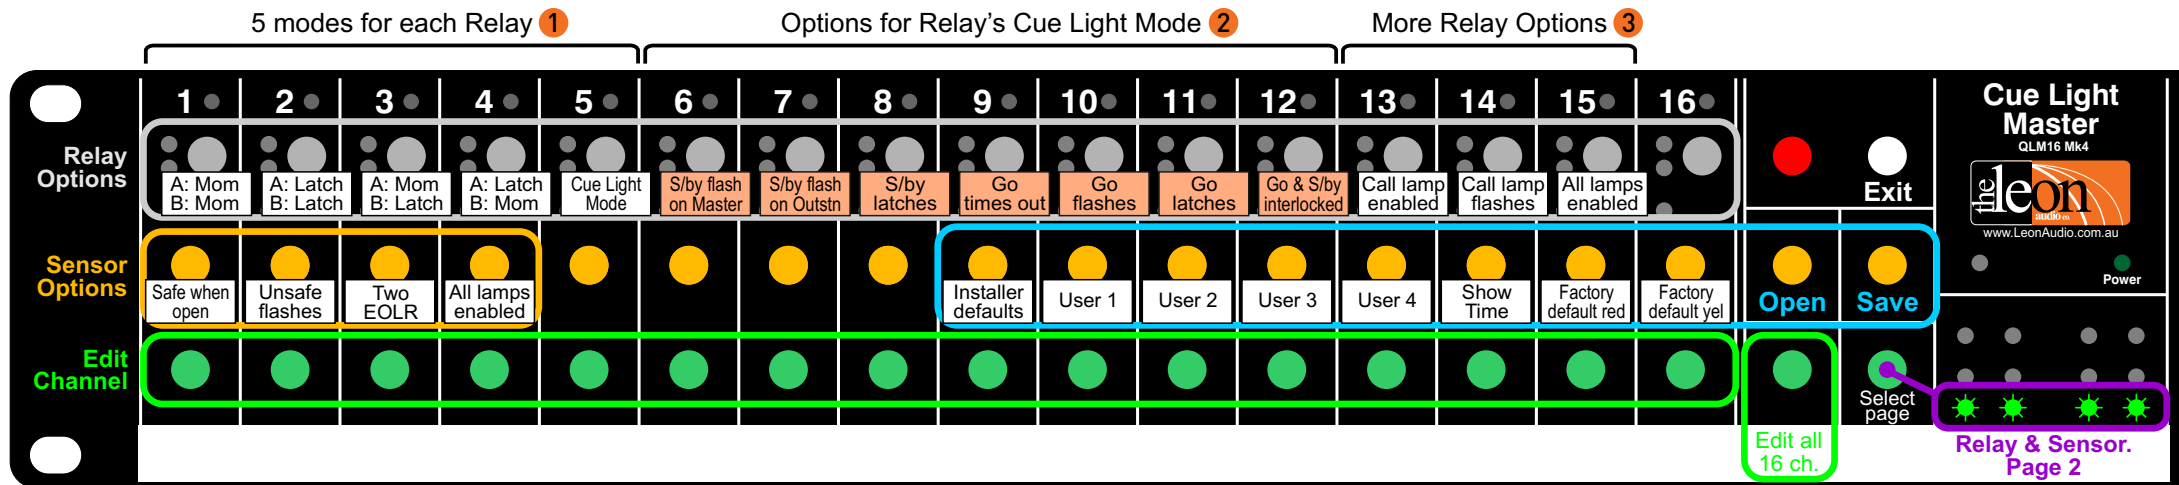

Relay options (grey buttons)



Master Station's Configuration Editor (continued)

Relay Outstation options

Relay Mode

Each Relay must be assigned to one of 5 modes. Select a **Relay mode** from these 5 grey buttons ①. When any of these buttons are pressed, two adjacent orange lamps ④ light to indicate the selected option.

The green buttons ⑥ indicate the status of the selected mode for each of the 16 channels. When a green button is illuminated, that channel is assigned to the selected mode ①.

Pressing a green button assigns that Relay to the selected mode. Once assigned to a particular mode, that channel can not be deselected by pressing its green button a second time. To deselect a Relay from a particular mode, just assign it to the required mode and that action will deselect it from all other modes.

Example: Change mode for Relay #12

Assign Relay #12 to **A:momentary B:Latch** mode.

- Start the Configuration Editor
- Select Page 2 ⑧
- Select **A:momentary B:Latch** mode ⑤
- Press green button for channel 12 ⑦
- Save to the **ShowTime** file
- Save to User file 1-4 (optional)
- Exit the Configuration Editor

	Relay A	Controlled by Standby button	Relay B	Controlled by Go button
1	Momentary		Momentary	
2	Latched		Latched	
3	Momentary		Latched	
4	Latched		Momentary	
5	Cue Light Mode		Cue Light Mode	

The 5 Relay Modes

- Momentary:** Relay operates only while the button is pressed.
- Latching:** Press the button to set (turn on) the relay. Press it again to reset (turn off) the relay.

Relay options (grey buttons)

Relay options (grey buttons) ①

Options for Relay's Cue Light Mode ②

More Relay Options ③

4

5

6

7

8

Relay options (grey buttons)

5 modes for each Relay ①

Options for Relay's Cue Light Mode ②

More Relay Options ③

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16

Relay Options

Sensor Options

Edit Channel

Exit

Open

Save

Select page

Edit all 16 ch.

Relay & Sensor. Page 2

Cue Light Master QLM16 Mk4

the leon audio co.

www.LeonAudio.com.au

Power



Master Station's Configuration Editor (continued)

Cue Light Mode

The **Cue Light mode** is one of five possible modes that a Relay can be assigned to. There are seven additional options for this mode which only come into effect when the Relay is assigned to the **Cue Light mode**.

Select a **Cue Light mode** option to be edited using the grey buttons **2**

The green buttons **5** indicate the status of this option for each of the 16 channels. When a green button is illuminated, the option for that channel is active/selected.

Toggle all 16 channels at once by using the **Edit all 16 ch** button **6**

More Relay Options

There are three additional options **3** for the Relay Outstation that are independent of the Relay's mode settings.

Two of these options control the behaviour of the **Call** lamp on the Master Station. The third option, **All lamps enabled** blanks all lamps on the Relay Outstation. This is useful when the Relay Outstation needs to hide from public view.

When the lamps are disabled, pressing the Grey **Enable** button on the Relay Outstation will momentarily light the Outstation's lamps so that its operation can be monitored or its mode changed.

When the Cue Light mode is selected, the following 7 options are available. All options can be programmed individually for each channel.

Options	Factory Default	User Selectable Option
S/by Flash on Master	Flashes	Steady
S/by Flash on Outstation	Flashes	Steady
S/by latches	Latches	Momentary
Go times out	Times out	Stays on
Go flashes	Flashes	Steady
Go latches	Latches	Momentary
Go & S/by interlocked	Interlocked	Independent

Cue Light Mode options for the Relay (QLR) Outstation **2**

There are three more Relay options:

Options	Factory Default	User Selectable Option
Call lamps enabled	Enabled	Call lamp off
Call lamp Flashes	Flashes	Steady
All lamps enabled	Enabled	Off

More options available for all 5 modes **3**

The diagram shows the Master Station configuration editor interface with the following components and callouts:

- 1**: 5 modes for each Relay (1-5)
- 2**: Options for Relay's Cue Light Mode (6-12)
- 3**: More Relay Options (13-15)
- 4**: Relay Options (grey buttons)
- 5**: Sensor Options (yellow buttons)
- 6**: Edit Channel (green buttons)

Relay options (grey buttons):

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
A: Mom B: Mom	A: Latch B: Latch	A: Mom B: Latch	A: Latch B: Mom	Cue Light Mode	S/by flash on Master	S/by flash on Outstn	S/by latches	Go times out	Go flashes	Go latches	Go & S/by interlocked	Call lamp enabled	Call lamp flashes	All lamps enabled	Exit
Safe when open	Unsafe flashes	Two EOLR	All lamps enabled					Installer defaults	User 1	User 2	User 3	User 4	Show Time	Factory default red	Factory default yel
															Open
															Save
															Select page
															Edit all 16 ch.
															Relay & Sensor. Page 2



Master Station's Configuration Editor (continued)

Sensor options

The Sensor Outstation has 4 options ①, 3 of which are programmable from the Outstation's front panel. When an option is changed from the Outstation, the change is sent to the Master Station and saved in the Master's **ShowTime** file for recall next time the system is turned on. To save **ShowTime** file changes to one of the 4 User files, follow the steps in the example below.

Example: Saving changes made to the ShowTime file

Start the Configuration Editor.
The Editor opens with the **ShowTime** file already loaded.
Save the **ShowTime** file to User file 1-4.
Exit the Configuration Editor.

Options	Factory Default	User Selectable Option
Safe when open	when open	Safe when closed
Unsafe lamp Flashes	Flashes	Steady
No End-of-Line Resistors	No resistors	2 EOL Resistors
All lamps enabled	Enabled	Off


Sensor Outstation options

Select an option to edit by using the yellow buttons ①
The button will light to indicate the selection.
Edit that option on a channel by channel basis using the Green buttons ④ (Green button lit = option active)
Toggle all 16 channels at once by using the **Edit all 16 ch** button ⑤

The **All lamps enabled** option can only be edited by using the Master Station's Configuration Editor. This option blanks all lamps on the Sensor Outstation which is useful when the Sensor Outstation needs to hide from public view. When the lamps are disabled, pressing the Grey **Enable** button on the Outstation will momentarily light the Outstation's lamps so that its operation can be monitored or its mode changed.

Example: (set Sensor #4 to use 2 End-of-Line Resistors)

Start the Configuration Editor
Select Page 2 ⑥
Select **Two EOLR** option ②
Press the green button for channel 4 ③ to select the **Two EOLR** option.
(Green button lit = 2 EOL Resistors)
(Green button not lit = no EOL Resistors)
Save to the **ShowTime** file
Save to User file 1-4 (optional)
Exit the Configuration Editor

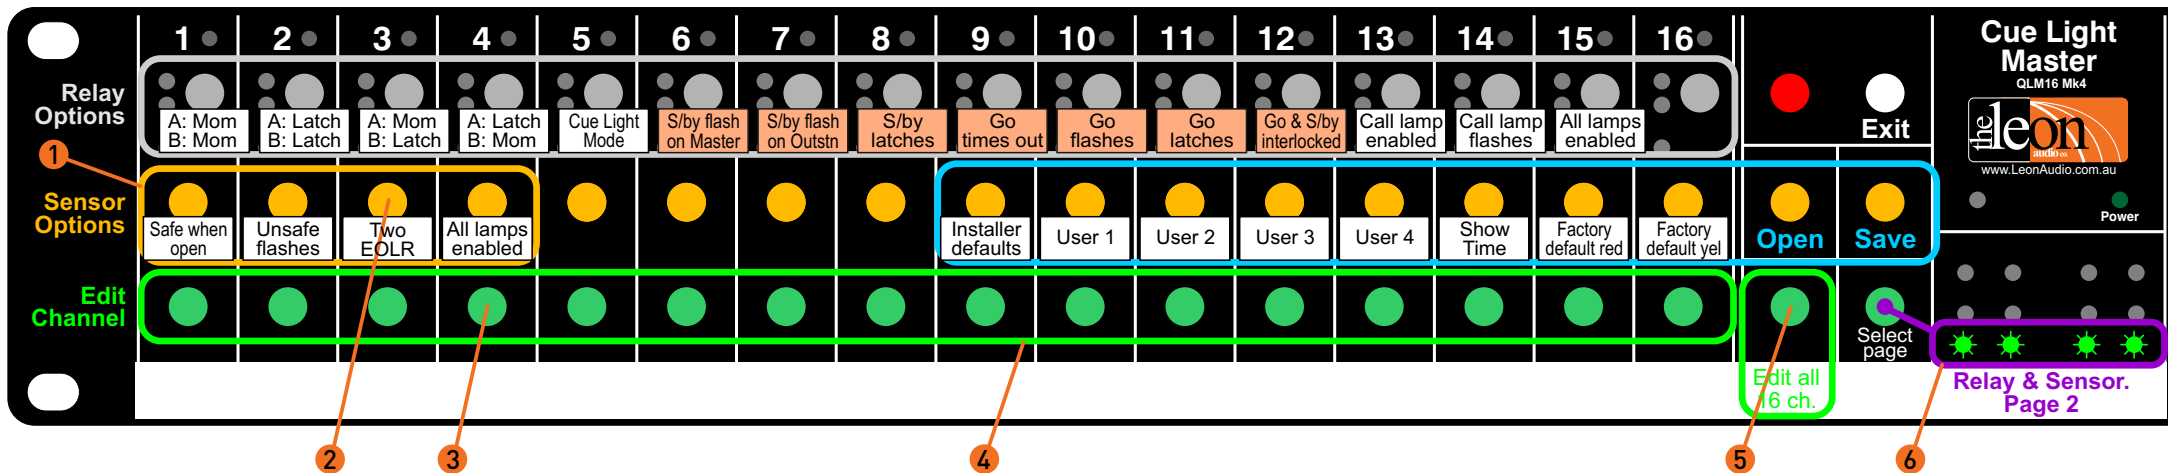



Diagnostics

Outstation test

This test is used to check operation of Outstation lamps, communication to and from the Master Station and cable voltage drop.

Press 2 buttons **8** until all lamps on the Master Station's front panel light (takes about 4 seconds), then release the buttons.

To exit this test, press either of the 2 buttons **8** or cycle the mains power.

The Go and Standby lamps on all outstations flash alternately. Outstation Standby colour changes between red & yellow on every 2nd flash of the Standby lamp.

As all Outstations are active, this provides the maximum voltage drop ***** on the interconnecting cables. When the number of Outstations placed on the end of a cable run exceeds the number specified in the table on page 35, any excessive voltage drop may cause the Outstations to automatically dim their lamps to reduce power consumption and hence reduce the voltage drop. The automatic dimming of the Outstation lamps is an indicator that the limits of the cable run are being approached.

***** The maximum voltage drop will be higher if Outstations are configured to allow both Go and Standby lamps to be on at the same time.

Button & Lamp test

This test is used to check the operation of buttons and lamps on the Master Station.

Press 3 buttons **7** until all lamps on the Master Station's front panel light (takes about 4 seconds), then release the buttons.

To exit this test, press the 3 buttons **7** again or cycle the mains power.

The lamps on channels 1-16 will chase sequentially in rows. The sequence is **1 2 3 4 5 6** followed by **5** and **6** on together but dimmed. The sequence then repeats. Lamps to the right of channel 16 also flash sequentially.

Pressing any button will halt the chase sequence and light lamp(s) adjacent to the button that was pressed.

Pressing the Go or Standby buttons on channels 1-16 will light the button pressed. Pressing the Group button on channels 1-16 will light the Fault, Group A & B and Call lamps for the channel pressed.


Pressing the 6 buttons to the right of channel 16:-

Pressing the red Beep button will light lamps **1 2 3 4** on channels 1 to 8.

Pressing the white Dimmer button will light the same lamps on channels 9 to 16.

Pressing Group A Standby or Go button lights the button of same name on channels 1-8.

Pressing Group B Standby or Go button lights the button of same name on channels 9-16.

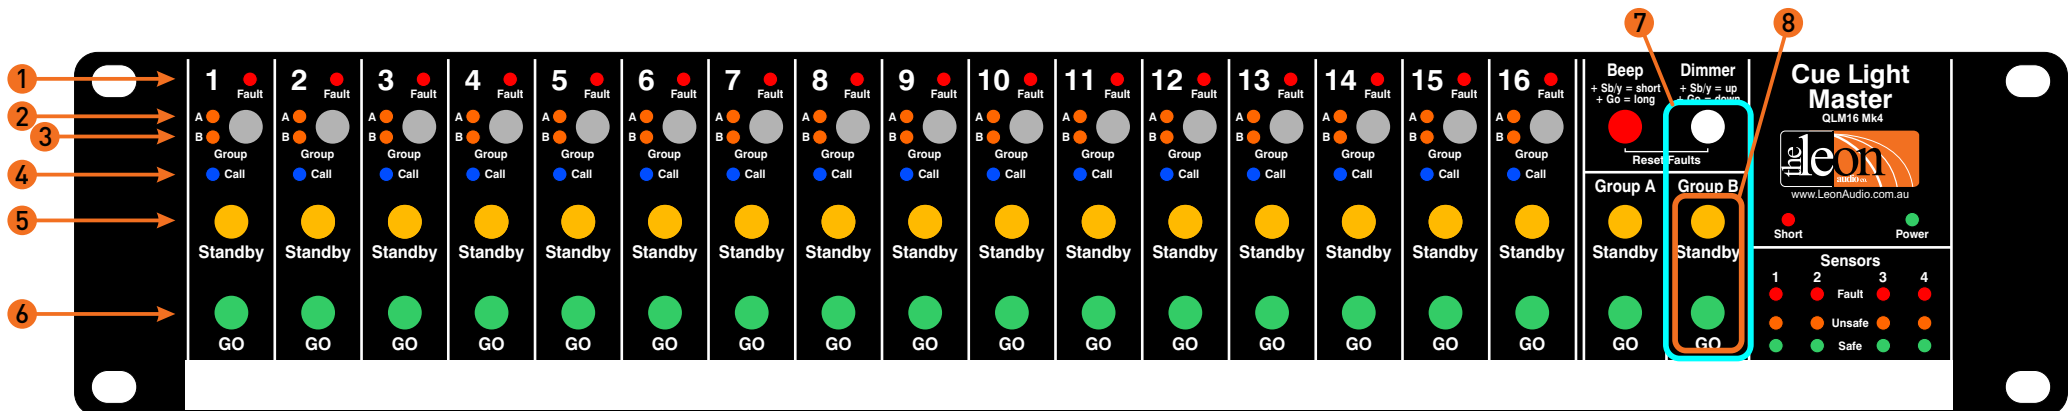



System Design Suggestions

For Cue Light designers and consultants

The Master Station has 16 channels for Cue Lights, but you can connect any number of Outstations from 1 to 40.

Using the ability to connect more than one Outstation to the same channel will free up the Groups which are used to trigger cues on multiple Outstations.

Two Master Stations can be connected to the same Cue Light wiring **universe** allowing for control of 16 channels from both Master Stations at the same time.

The Beeper Outstation **QLS-B Mk4** can be used as a standard Outstation as it only beeps when specifically commanded to do so. Some customers order Beeper Outstations exclusively. The advantage is that the end user doesn't need to keep track of which Outstations have beepers and which don't.

The Small Footprint Cue Light **QLS-SM Mk4** was designed to sit on a lectern top or similar restricted space. Only one or two would be needed for a typical system. For a general purpose Outstation with mounting points, loop through XLR connectors and an Eavesdrop mode (for multiple Outstations on the same channel), use the Standard Outstation **QLS Mk4** or Beeper Outstation **QLS-B Mk4**.

The Relay Outstation **QLR Mk4** adds versatility to a system. One would be sufficient for a small system while 2 or 3 may be in order for a large system. Systems with specific needs may have a dozen or more.

The Sensor Outstation **QTS Mk4** also adds versatility to a system. The Master Station has a dedicated display for 4 Sensor Outstations.

These Sensor Outstations are numbered 1 to 4. More than 4 Sensor Outstations can also be included in a system. Sensor Outstations 5 to 16 use Cue Light channels 5 to 16. Other Outstations can not share a channel with a Sensor Outstation on channels 5 to 16.

If used, Sensor Outstations count towards the system total of 40 Outstations.

Some typical systems

Here are some suggested systems based on customer orders.

Basic systems

4-12 Channels

1 x Master Station QLM16 Mk4

4-12 x Standard Outstation QLS Mk4

1-4 x Beeper Outstation QLS-B Mk4

16 Channels (17 Outstations)

1 x Master Station QLM16 Mk4

12 x Standard Outstation QLS Mk4

4 x Beeper Outstation QLS-B Mk4

1 x Small Footprint Cue Light QLS-SM Mk4

Not so basic systems

12-16 Channels (16-24 Outstations)

1-2 Master Stations QLM16 Mk4

12-20 x Beeper Outstation QLS-B Mk4 (multiple Outstations per channel)

2 x Small Footprint Cue Light QLS-SM Mk4

1 x Relay Outstation QLR Mk4

1 x Sensor Outstation QTS Mk4

16 Channels (26-40 Outstations)

1-2 Master Stations QLM16 Mk4

16-30 x Beeper Outstation QLS-B Mk4 (multiple Outstations per channel)

2 x Small Footprint Cue Light QLS-SM Mk4

4 x Relay Outstation QLR Mk4

4 x Sensor Outstation QTS Mk4

Executive Summary:

- Specify Beeper Outstations in preference to Standard Outstations.
- Include some Relay & Sensor Outstations.
- Don't specify lots of Small Footprint Cue Lights.



Why not use bigger buttons?



The Cue Light Master Station uses 9.5mm (3/8") diameter buttons.

Having a reasonable space between the buttons lessens the possibility of hitting an adjacent button, especially when stabbing at a button in a hurry.

The red square on channels 2 & 4 shows the **target area** of 33mm x 33mm in which a finger tip can land and press a button without causing a false press of an adjacent button.

By using a larger 19mm square button as shown on channels 6-8, the target area is reduced to 22mm x 22mm before a false button press may result.

The operator has to be quite accurate with finger placement as there are only a few millimeters (1/10ths of an inch) of room to move off centre before hitting an adjacent button.

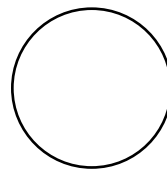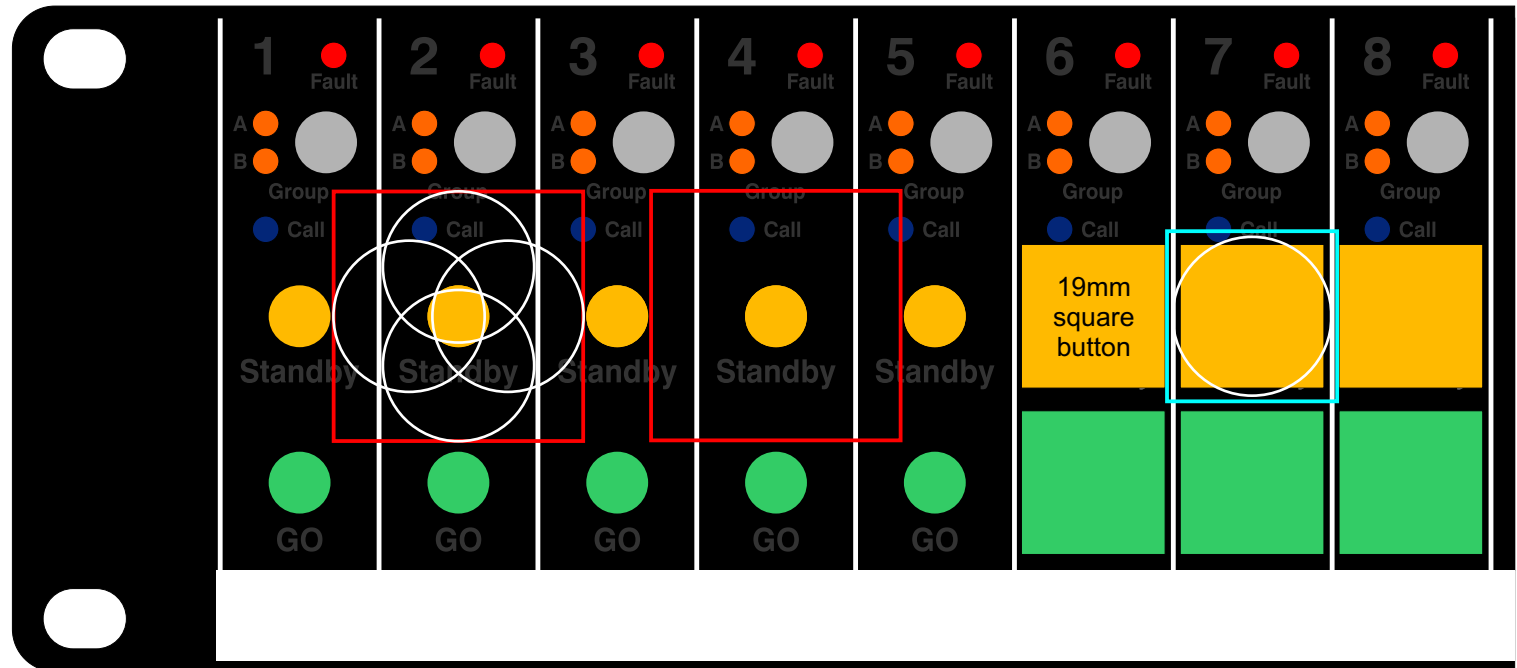

Nominal fingertip.
20mm diameter

9.5mm Button
Target area
33 x 33mm

19mm Button
Target area
22 x 22mm



Specifications

Master Station QLM16 Mk4

Outstation Connectors

Genuine Neutrik XLRs. 3 pin male and female in parallel

Power

70 watts maximum. 10 to 30 watts typical.

External universal power supply:-

Input: 90 to 264 volts 50/60Hz

Output: 36V DC 1.9 amps.

Continuous short circuit protection (Auto recovery).

Over-voltage protection.

Dimensions

Width: Standard 19" (483mm) rack mount chassis.

Height: 2 units high. 88mm (3.5")

Depth (excluding connectors): 90mm (3.6")

A table mounting bracket is also available.

Chassis

2mm aluminium front panel with 1.6mm sub chassis.

1.6mm welded aluminium rear cover. Black powder coat finish.

Weight

2.7kg (5.95 lbs) including power supply.

Standard Outstation QLS Mk4

Lamps

20mm diameter lamps with four LEDs per colour.

Connectors

Genuine Neutrik XLRs. 3 pin male and female in parallel

Power

Powered from the Master Station via the XLR data cable

Dimensions

Width: 92mm (3.7")

Length (excluding connectors): 148mm (5.8")

Height: 38mm (1.5")

Chassis

2mm steel rear and sides. 1.6mm aluminium front and ends.

Black powder coat finish.

7 mounting points

Weight

505g (1.11 lbs)

Beeper Outstation QLS-B Mk4

Lamps

20mm diameter lamps with four LEDs per colour.

Connectors

Genuine Neutrik XLRs. 3 pin male and female in parallel

Power

Powered from the Master Station via the XLR data cable

Dimensions.

Width: 92mm (3.7")

Length (excluding connectors): 148m (5.8")

Height: 38mm (1.5")

Chassis

2mm steel rear and sides. 1.6mm aluminium front and ends.

Black powder coat finish.

7 mounting points

Weight

510g (1.12 lbs)



Specifications

Small Footprint Cue Light QLS-SM Mk4

Lamps

20mm diameter lamps with four LEDs per colour.

Connector

Permanently attached 1m Canare cable fitted with a 3 pin male XLR.

Power

Powered from the Master Station via the XLR data cable

Dimensions.

Width: 59mm (2.3")

Length (excluding connectors): 110m (4.3")

Height: 35mm (1.4")

Chassis

Diecast aluminium. Black powder coat finish.
No mounting points

Weight

270g (0.56 lbs)

Small Footprint with beeper QLS-SM-B Mk4

Lamps

20mm diameter lamps with four LEDs per colour.

Connector

Permanently attached 1m Canare cable fitted with a 3 pin male XLR.

Power

Powered from the Master Station via the XLR data cable

Dimensions.

Width: 59mm (2.3")

Length (excluding connectors): 110m (4.3")

Height: 35mm (1.4")

Chassis

Diecast aluminium. Black powder coat finish.
No mounting points

Weight

275g (0.57 lbs)

Relay Outstation QLR Mk4

Connectors

Genuine Neutrik XLRs. 3 pin male and female in parallel

Power

Powered from the Master Station via the XLR data cable

Dimensions

Width: 92mm (3.7")

Length (excluding connectors): 143mm (5.6")

Height: 43mm (1.7")

Chassis

2mm steel rear and sides. 1.6mm aluminium front and ends.
Black powder coat finish.
6 mounting points

Weight

540g (1.19 lbs)

Sensor Outstation QTS Mk4

Connectors

Genuine Neutrik XLRs. 3 pin male and female in parallel

Power

Powered from the Master Station via the XLR data cable

Dimensions

Width: 92mm (3.7")

Length (excluding connectors): 143mm (5.6")

Height: 43mm (1.7")

Chassis

2mm steel rear and sides. 1.6mm aluminium front and ends.
Black powder coat finish.
6 mounting points

Weight

530g (1.17 lbs)



Specifications

Work-Light Outstation QWL-xx Mk4

Lamps

20mm diameter lamps with multiple LEDs per lamp.

Connectors

Genuine Neutrik XLRs. 3 pin male and female in parallel

Power

Powered from the Master Station via the XLR data cable

Dimensions

Width: 92mm (3.7")

Length (excluding connectors): 148mm (5.8")

Height: 38mm (1.5")

Chassis

2mm steel rear and sides. 1.6mm aluminium front and ends.

Black powder coat finish.

7 mounting points

Weight

505g (1.11 lbs)



www.LeonAudio.com.au

62 Edgeware Road, Aldgate
South Australia, 5154

Phone: 08 8339 3865
Mobile: 0419 826 262

International
Phone: +61 8 8339 3865
Mobile: +61 419 826 262

query@LeonAudio.com.au
[click to email us](#)

Warranty

The Leon Audio Cue Light System is guaranteed for five years from date of original purchase against defects in workmanship and materials.

If such malfunction occurs, the item will be repaired or replaced (at our option) without charge for materials or labour if delivered prepaid to THE LEON AUDIO COMPANY. Unit will be returned prepaid.

Warranty does not cover finish or malfunction due to abuse or operation at other than specified conditions.

Repairs by other than THE LEON AUDIO COMPANY or authorized agents will void this guarantee.